


#### 4-4. ERROR MESSAGE

Self diagnostic system operates as follows.

- When the microprocessor is unable to receive an acknowledgement back from the device, the LED starts flashing according to the table below.

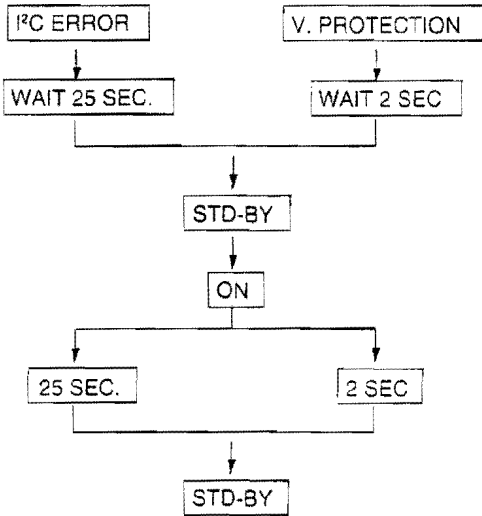

In the case of more than one error in parallel, the blinking error shows max priority according to the error number (e.g. error 2 and error 5 appear together, then LED,s show error 2).

**ERROR TABLE**

ERROR COUNT	IC TYPE	FUNCTION
1	I <sup>2</sup> C BUS	SDA low
2	X24C16	EPROM
4	TDA9145	Colour decoder
5	CXA1587	RGB/Jungle
6	TDA6612	Sound processor
7	CXD2018	V deflection
8	CXA1545	AV switch
11	SDA5248	Text
13		V protection

Stand By LED blinking

No 1K return

#### 4-5. ERROR I<sup>2</sup>C BUS DIAGNOSTIC SYSTEM FOR AE2-B CHASSIS.

For all IC's used in the AE 2-B chassis which are necessary to obtain picture and sound there is an inbuilt I<sup>2</sup>C Bus diagnostic system.

In the case of no acknowledge bit, LED A and LED B start blinking as shown.

