


SECTION 2  
DISASSEMBLY

2-1. REMOVAL


Rear Case Removal

Remove five screws TA, B3 x 14.

Tuning Knob Removal

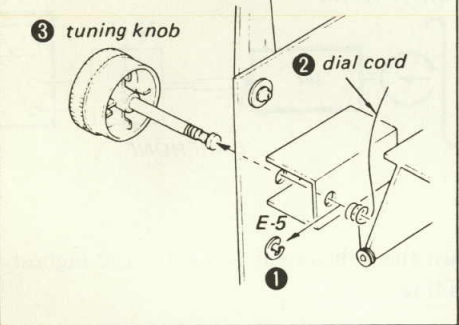


Main Circuit Board Removal

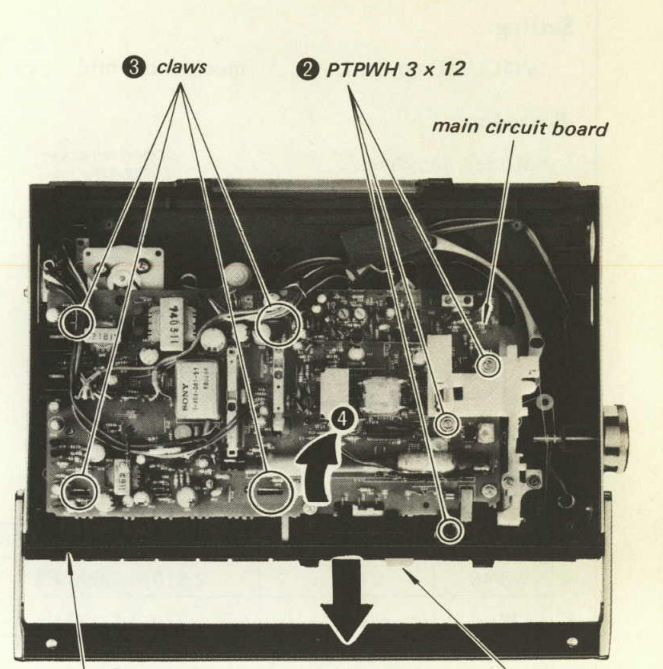

1 Set the VOLUME and TONE controls to the center position and remove the function panel.  
2 TONE and VOLUME knobs  
3 claws  
4 PTPWH 3 x 12

Note on Installation

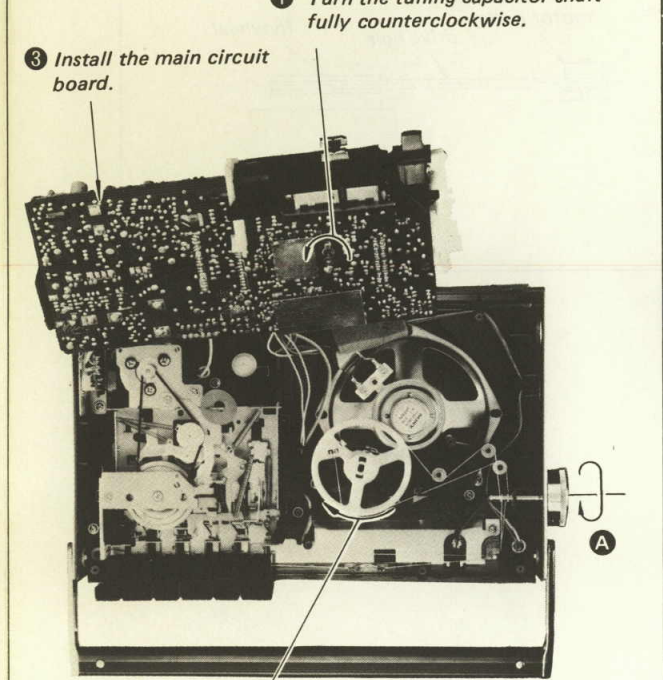

1 Turn the tuning capacitor shaft fully counterclockwise.  
2 Install the main circuit board.  
3 Turn the tuning drum fully clockwise by turning the tuning knob to the direction shown by the arrow A.


Tape Recorder Mechanism Removal



DIAL CORD STRINGING


2-2. DIAL CORD STRINGING

1) Preparation

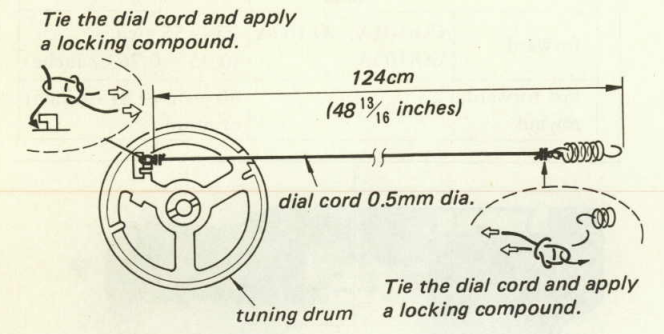


2) Dial Cord Stringing

3) Dial Pointer Setting

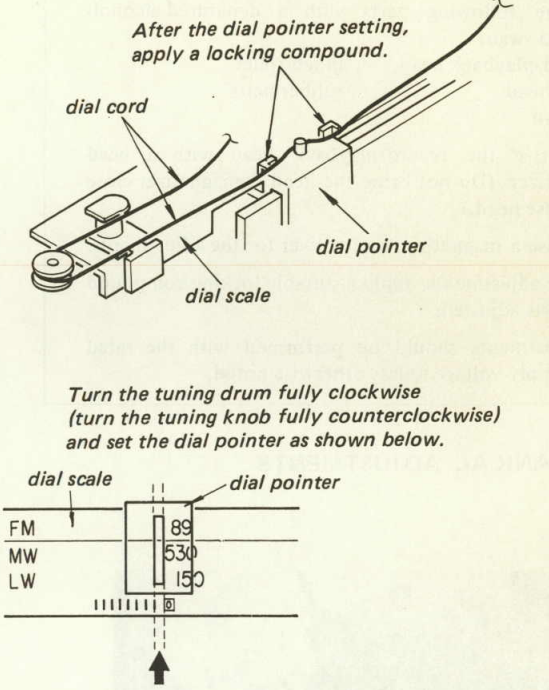


Note: When reattaching the main board after the dial cord stringing, turn the tuning capacitor shaft fully counterclockwise (conductor side view) and place the dial pointer on the position as shown in the above figure.



Flywheel and Belt Removal

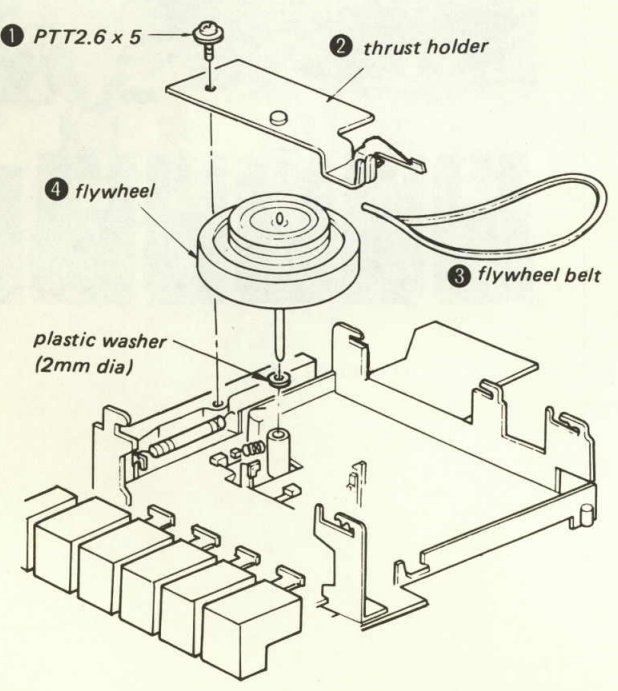

Rewind Arm Removal

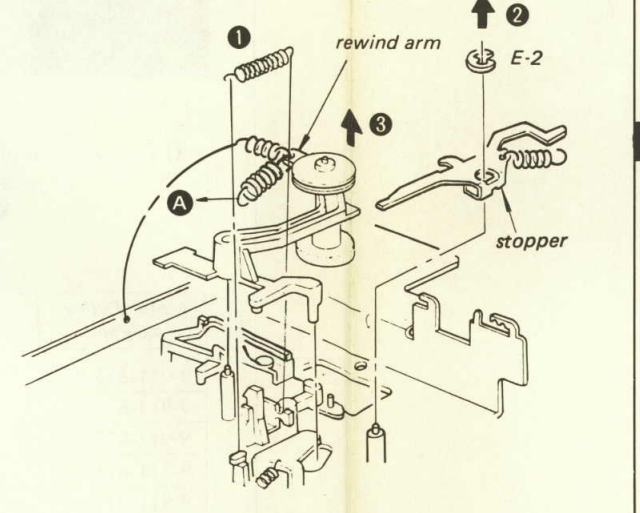

Forward Limiter Arm Removal

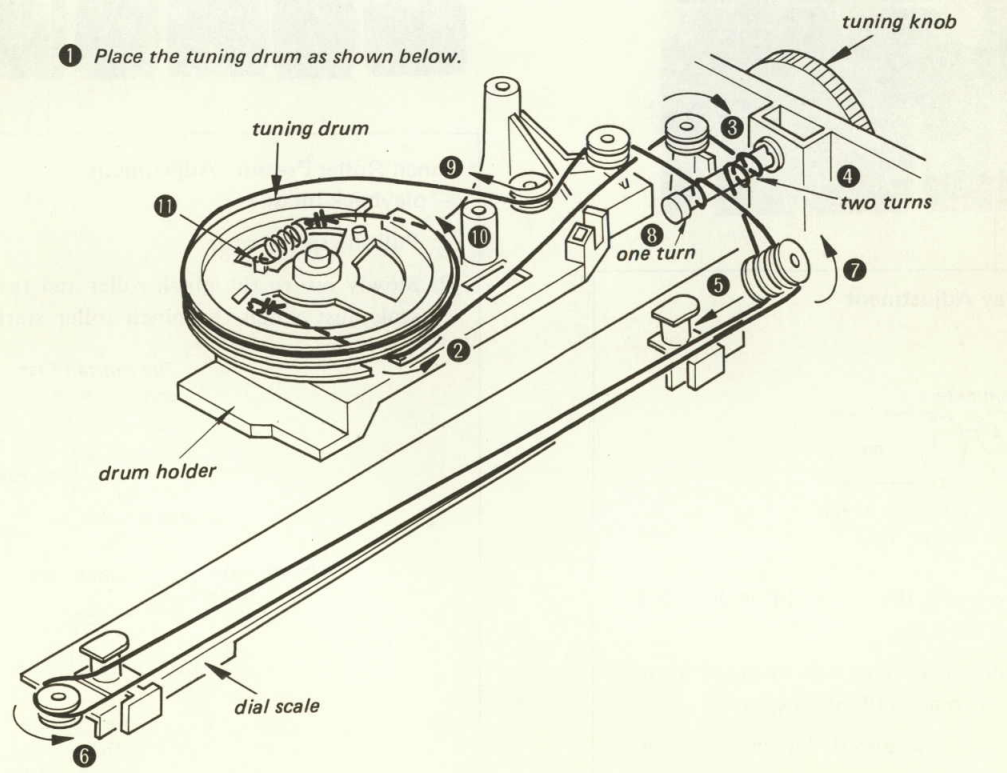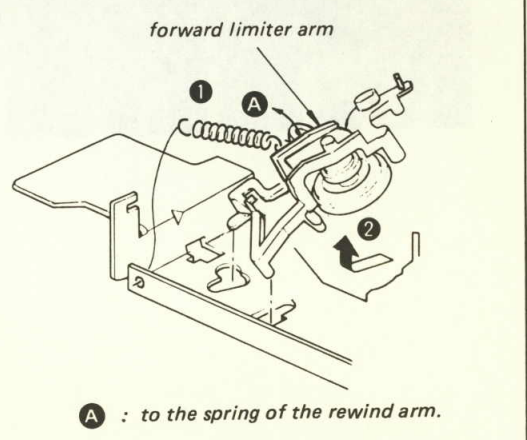

Digitized by WWW.FREESERVICE MANUALS.INFO

