

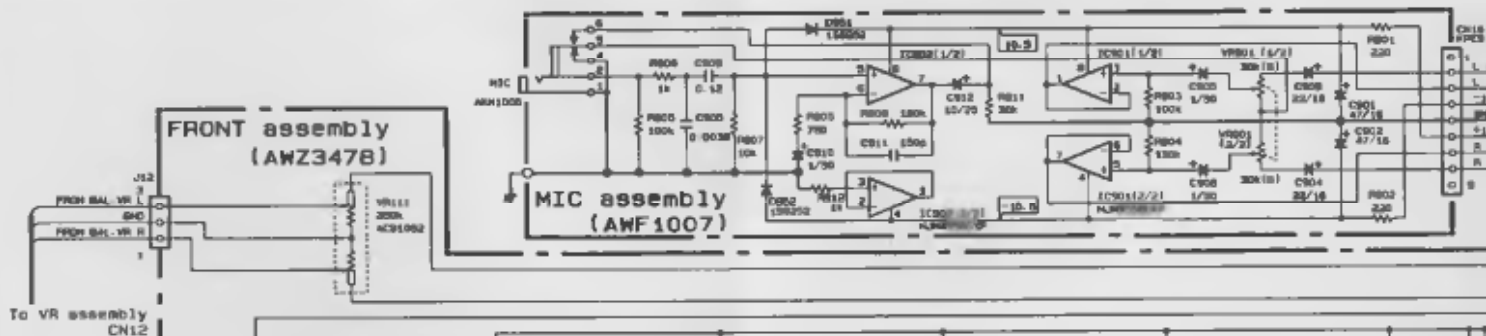



OM, VR IND, SUB TRANS and MIC assembly (AWF1007)

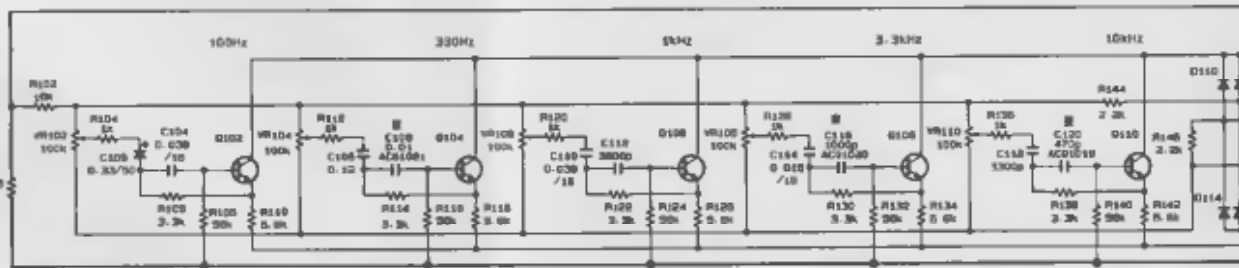


To VR assembly CN12

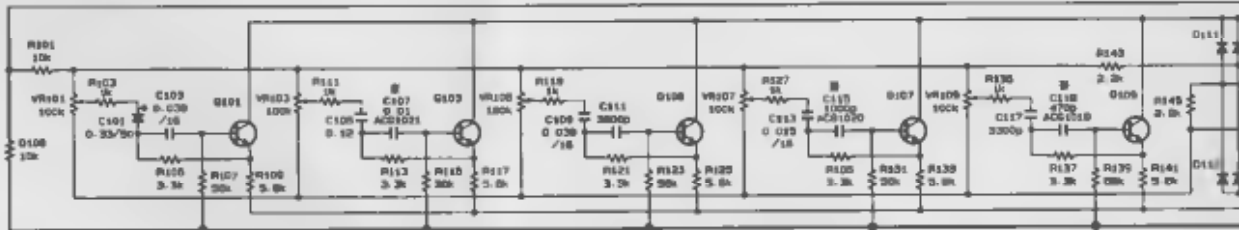


- IC52 SN74LS03N
- IC101-104 RC45580XP
- IC53 PD4269
- ICD1 SN74LS00N
- IC105 LC7566
- D51-52 DTA143E5
- D56 DTC124E5
- D58-120 RN1201
- D62 RN1203
- D53-54-57-59 RN2201
- D60 2SC1740S
- D101-110 2SC1740SLN
- D55 AEL1038
- D51-55 AEL1077
- D61 RD15ES8
- D68-164-166 RD5-1E66
- D70 RD7-5E58
- D67-60-62-65-1SS252
- D69-71-72-
- D101-104-107-114-
- D151-163-166
- D67 RD8-2E582
- S51-75 ASG1034

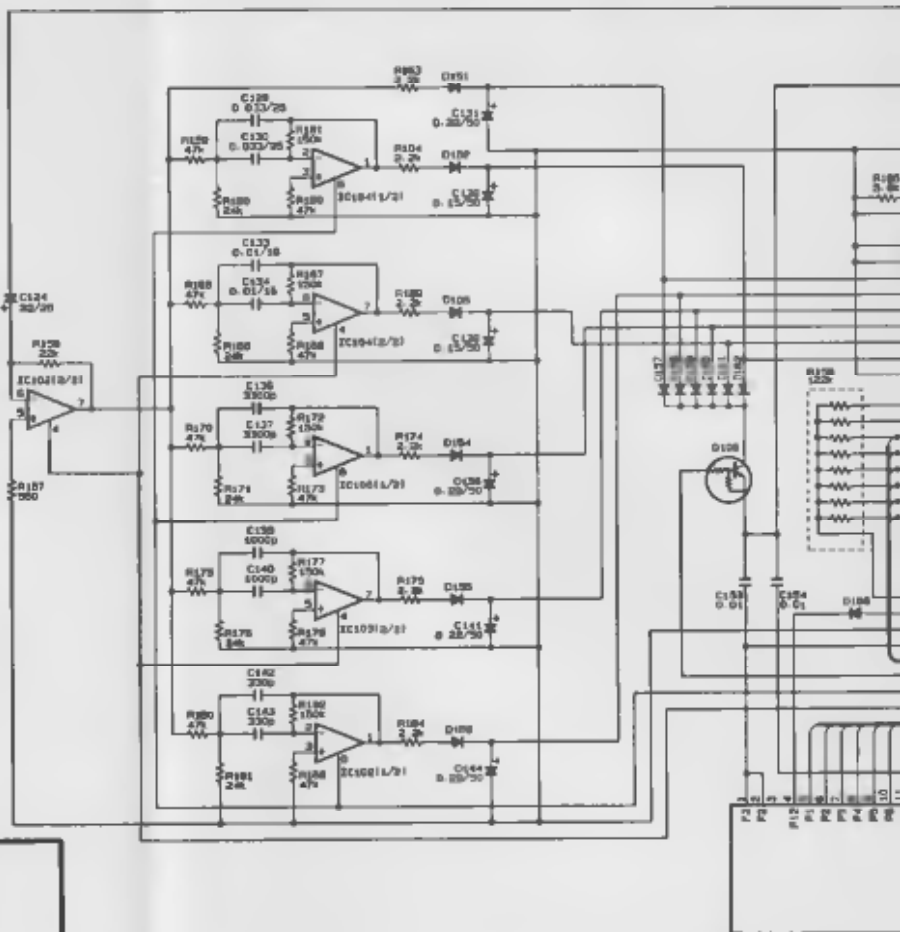

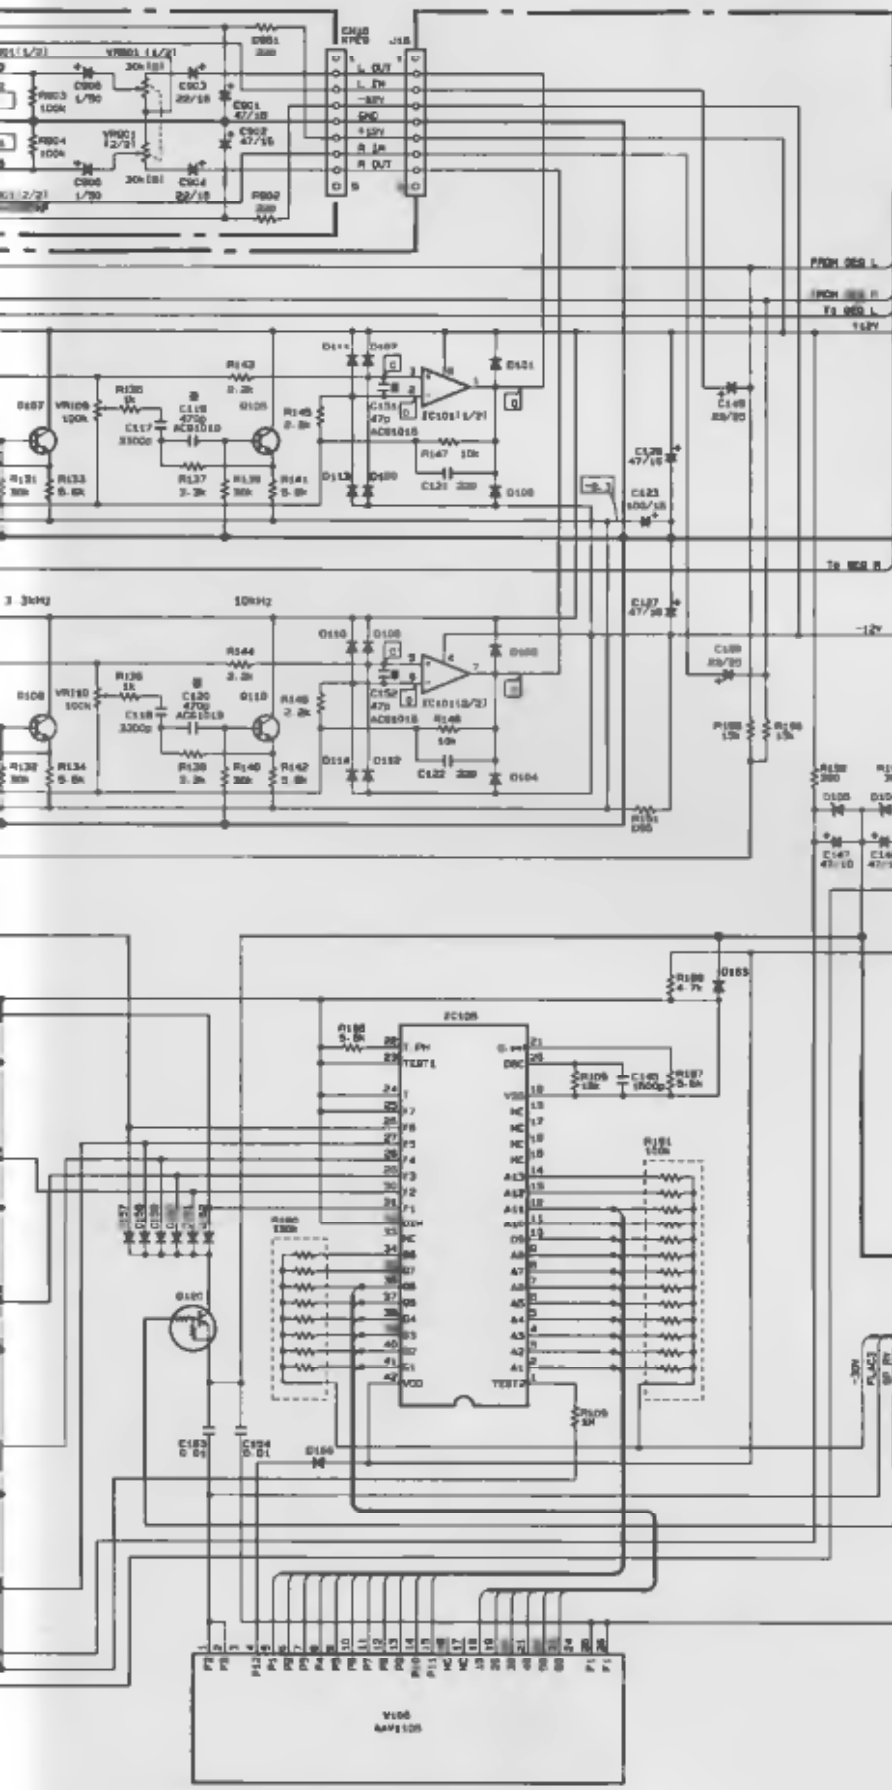


To DECK CONTROL assembly
CND
(To page 39)

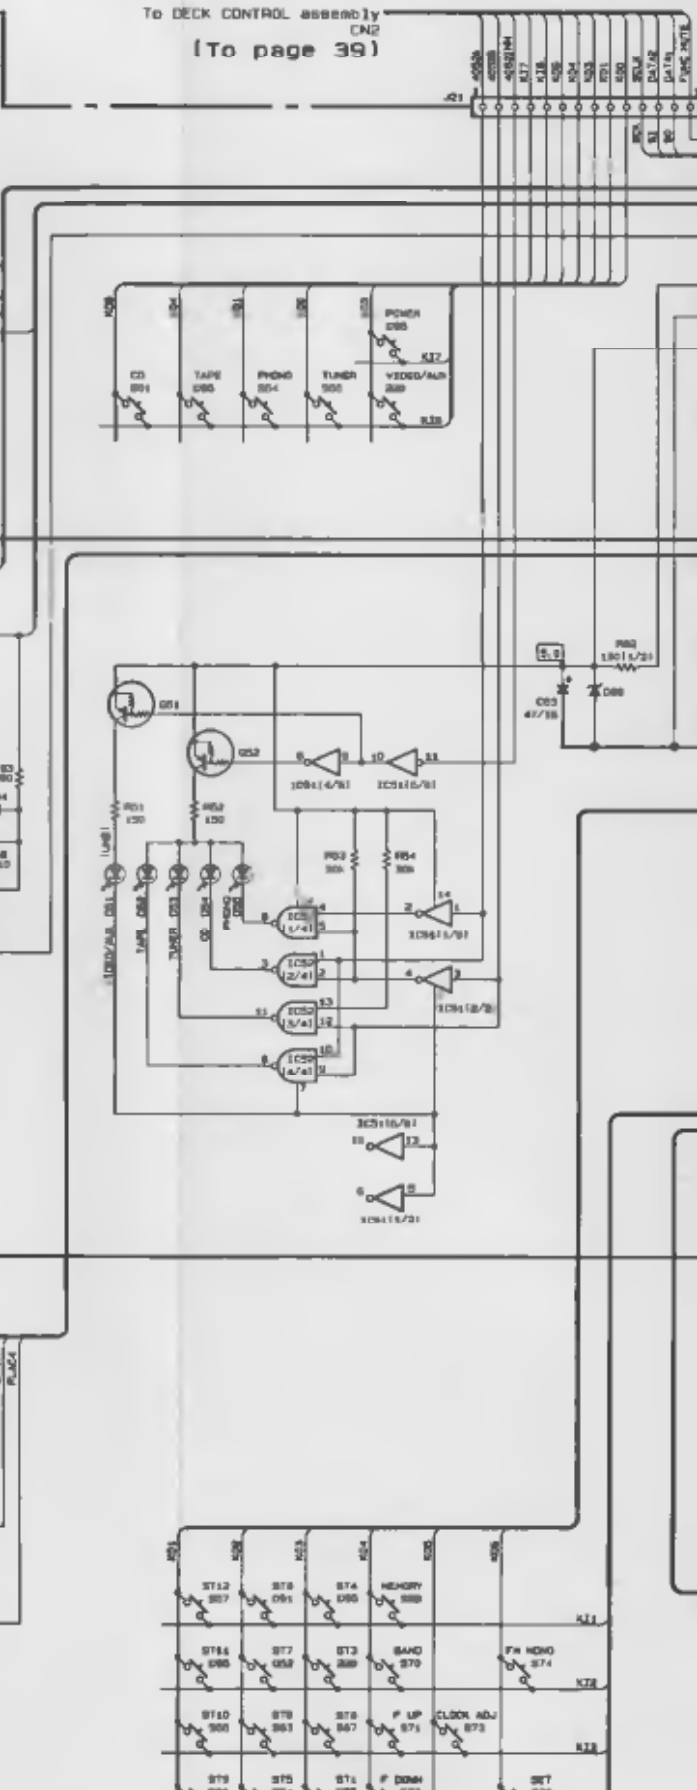


ROL assembly
CN2
page 39f

VR IND assembly

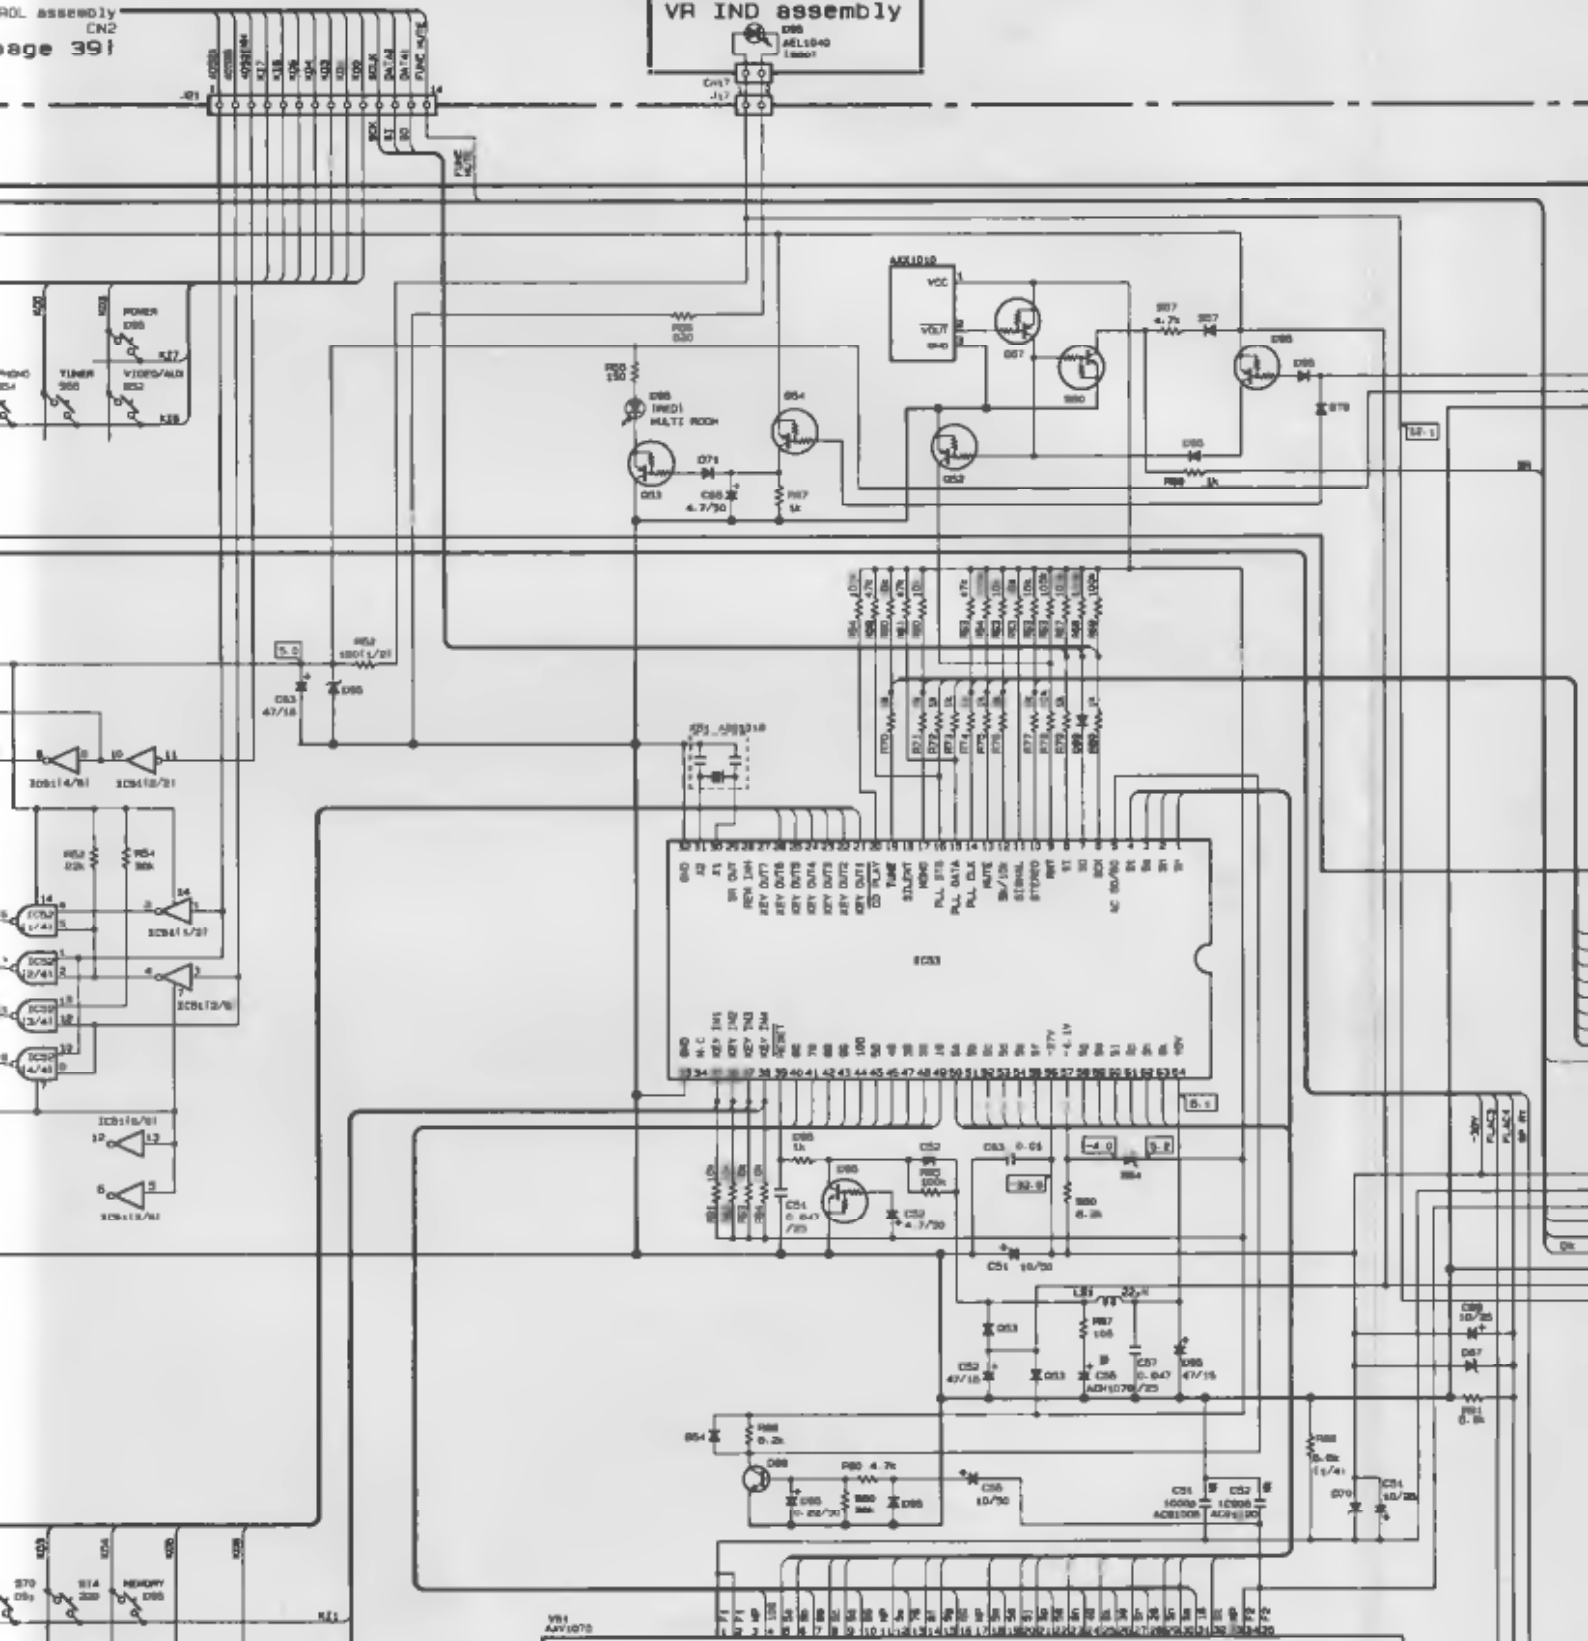

V81
ADV1070

TUNED	<input type="checkbox"/> STEREO	MAIN	SUB	LOCAL	WAKE UP	<input type="checkbox"/> 1	<input type="checkbox"/> 2	TIMER	<input type="checkbox"/> REC
MONO					DECK II	M	ON	SLEEP	
TV	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	MHZ	00	00	0
FM	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	KHZ	00	00	0
AM	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				TIME

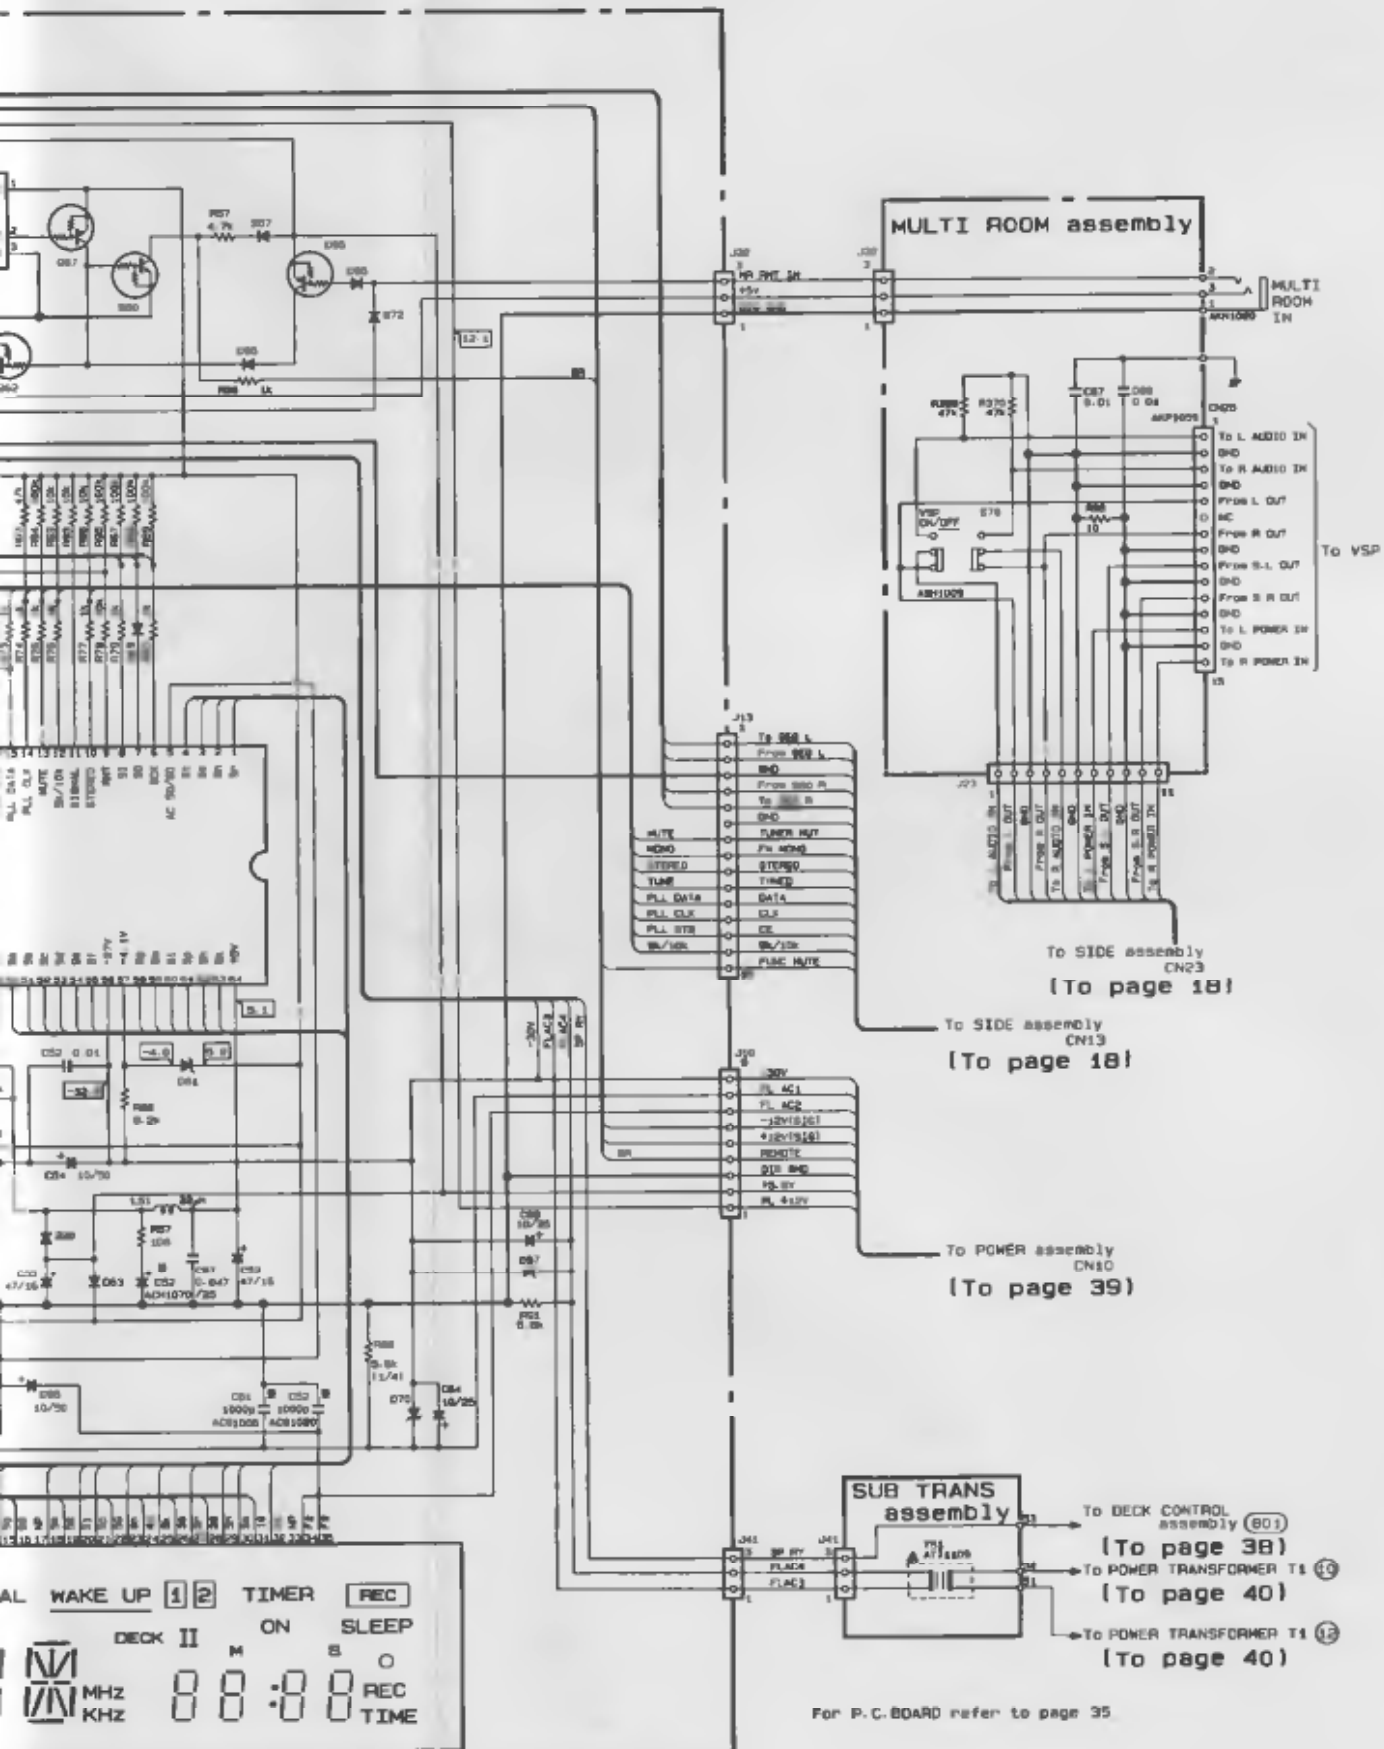

For P.C. BOARD refer to page 35.

A

SIDE assembly (AWZ2887)

PL 120V
40W-503

PLAYER +12V

VIDEO /A/B
L CH

PHONO

PHONO

VIDEO /A/B
R CH

VIDEO /A/B
PHONES

DAC

CH 1

PH L

PH R

CH 2

PH L

PH R

CH 3

PH L

PH R

CH 4

PH L

PH R

CH 5

PH L



PH R


CH 6

PH L


PH R


D

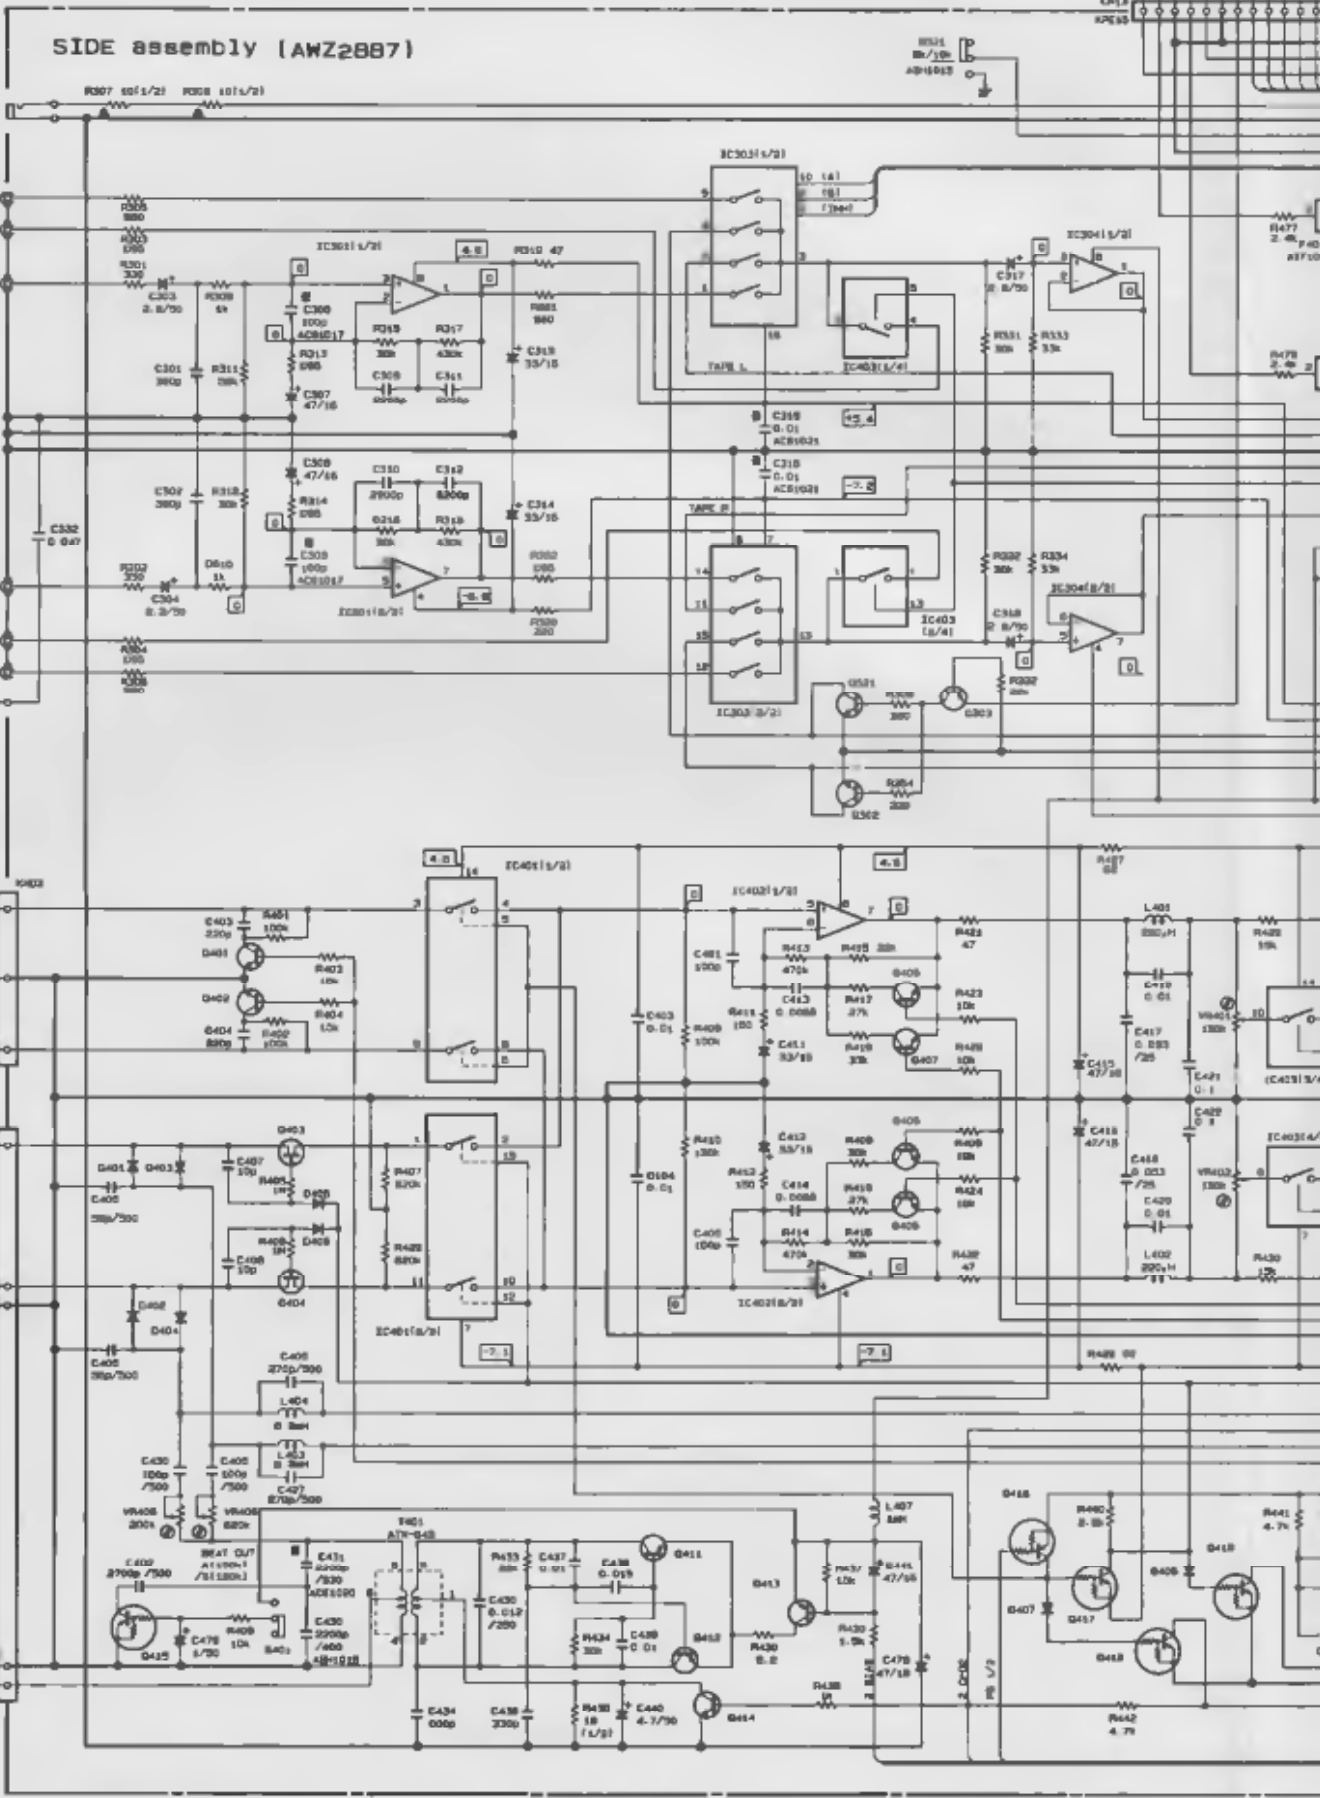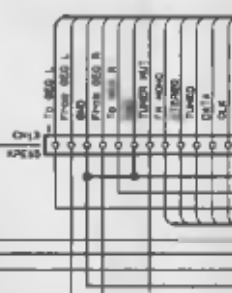

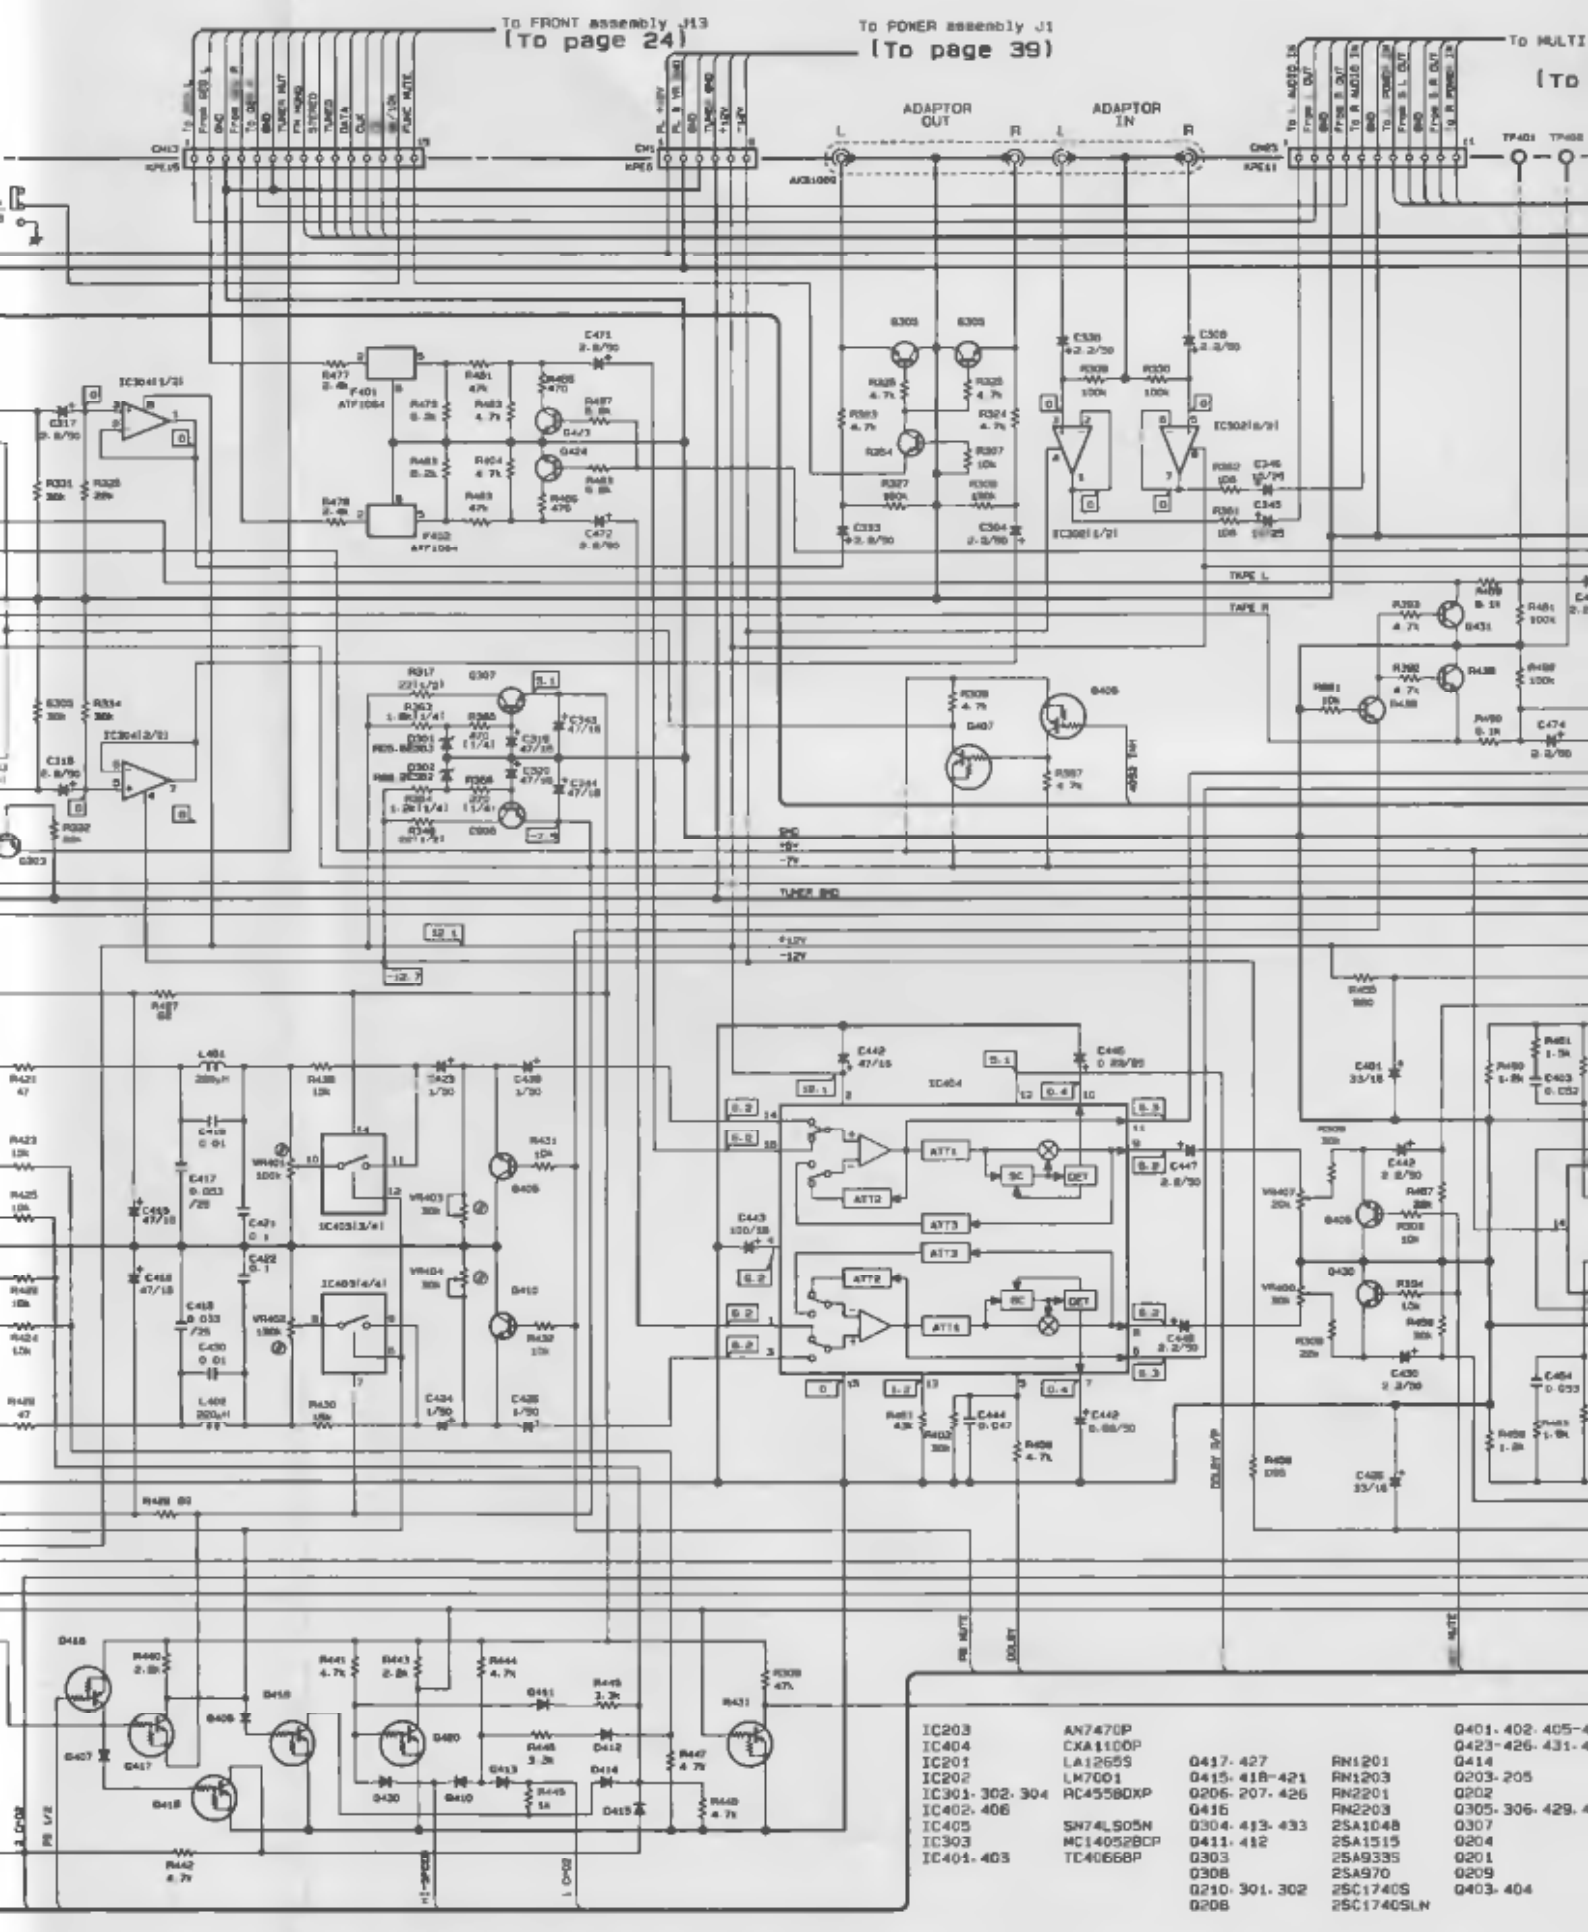


IC203	AN7470P	Q401-402	405-406
IC404	CXA1100P	Q423-426	431-432
IC201	LA1265S	Q414	
IC202	LM7001	Q203-205	
IC301-302-304	RC4558DXP	Q202	
IC402-406	Q416	Q305-306	429-430
IC405	SN74LS05N	2SA1048	Q307
IC303	MC1405BCP	Q411-412	2SA1515
IC401-403	TC4066P	Q303	2SA933S
		Q308	2SA970
		Q210-301-302	2SC174DS
		Q208	2SC1740SLN
			Q403-404

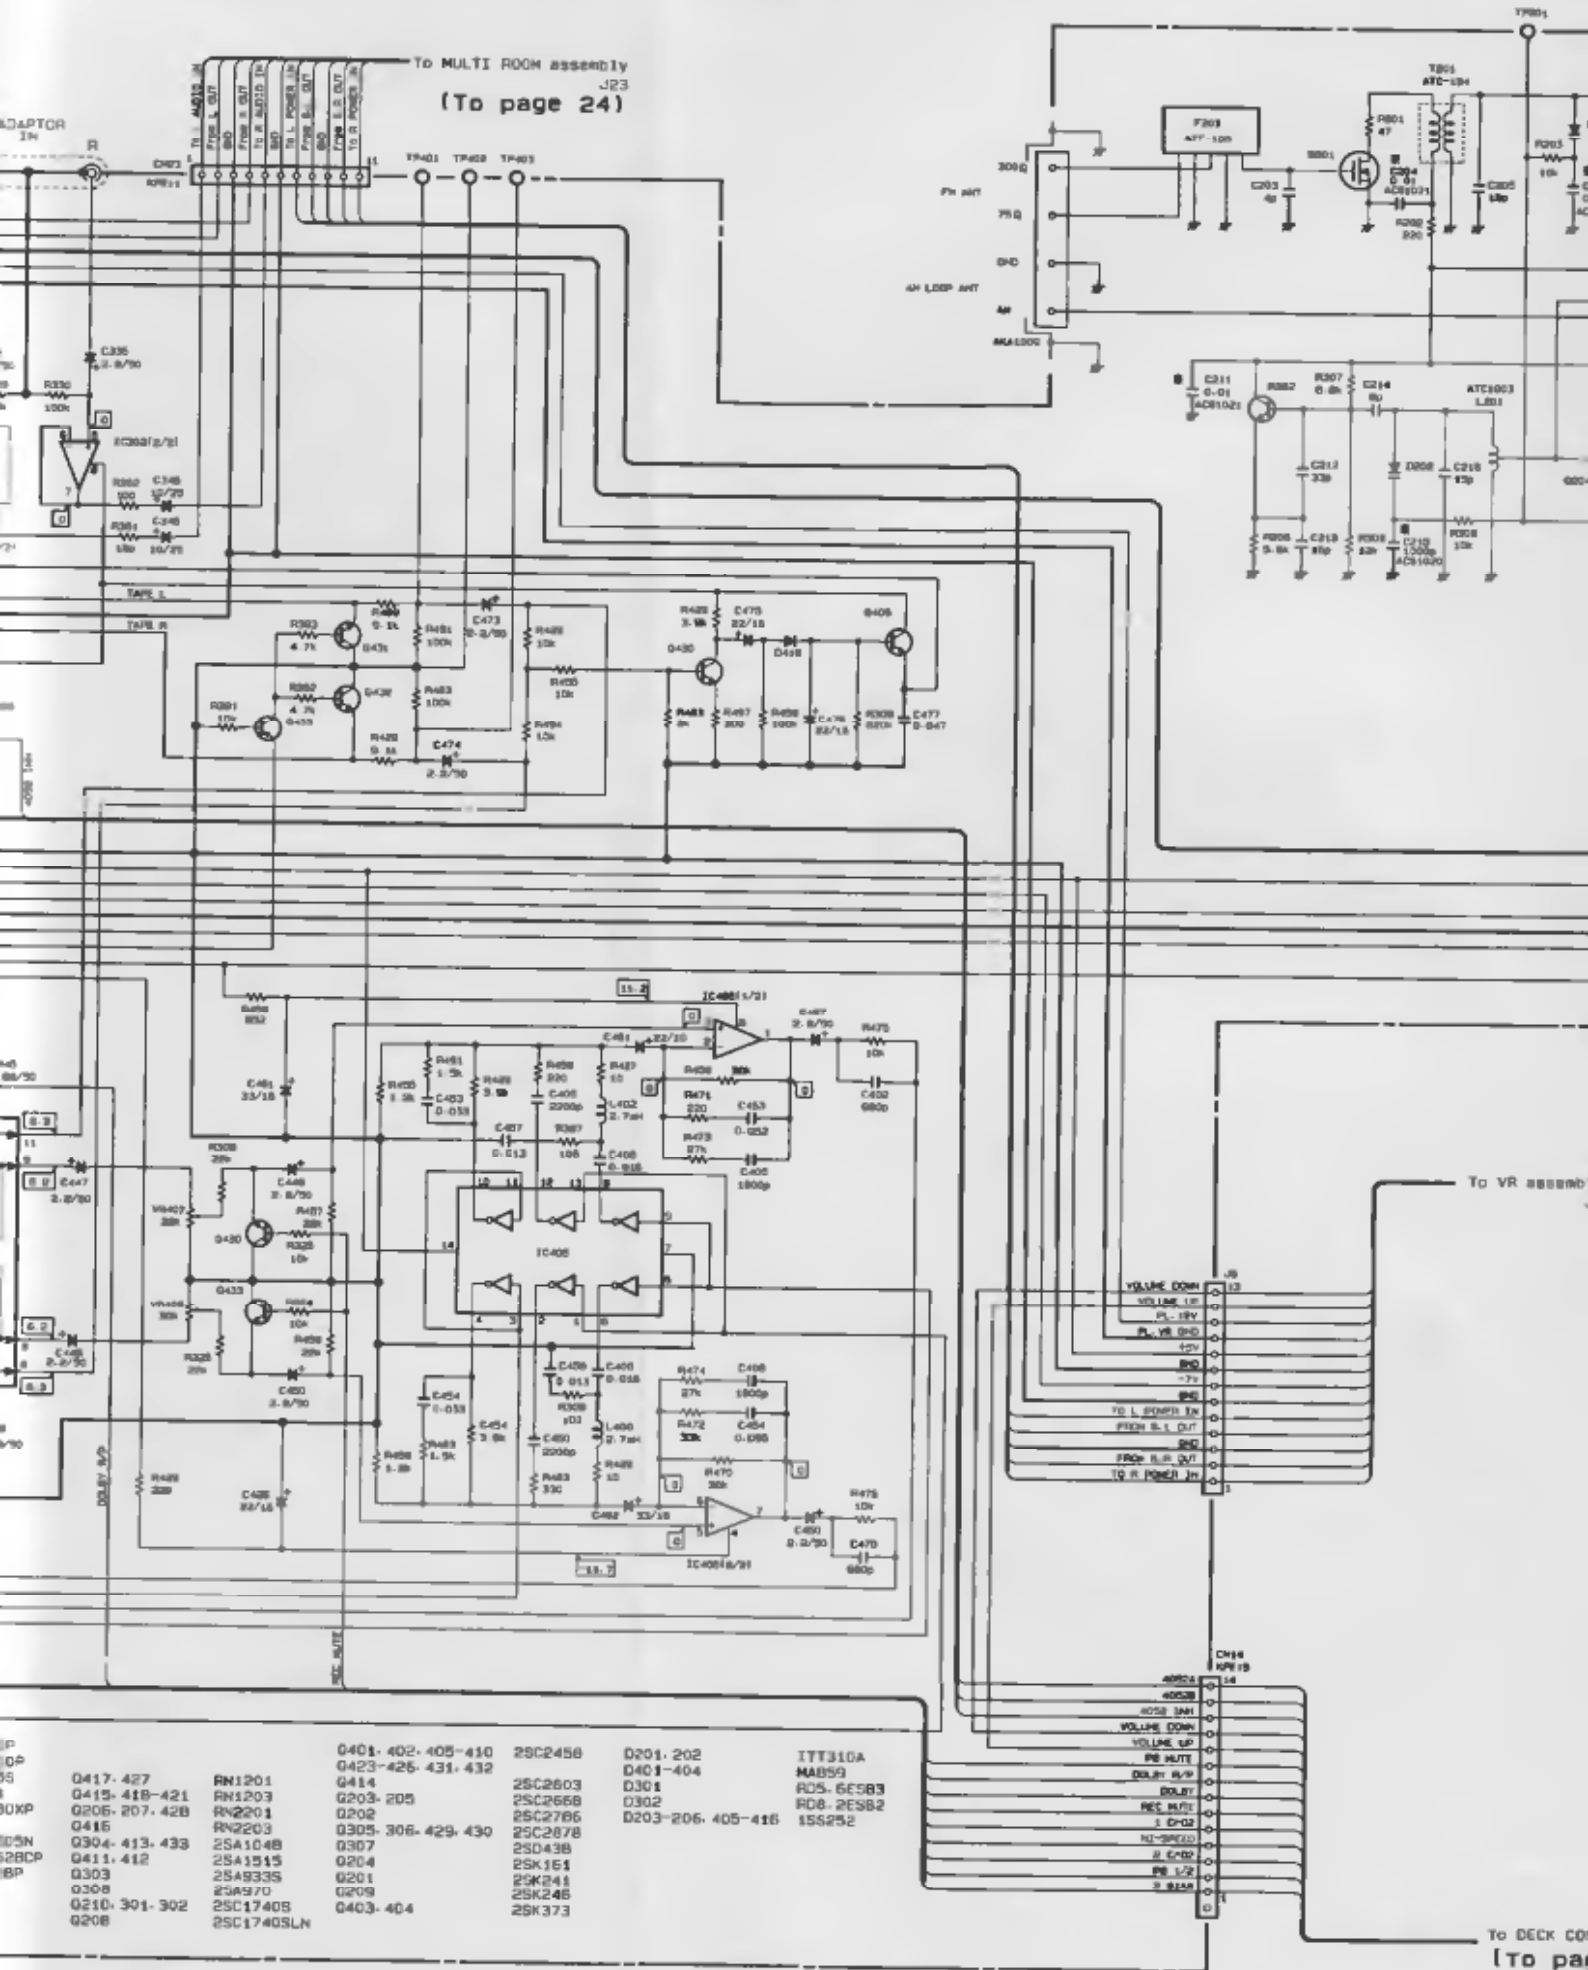


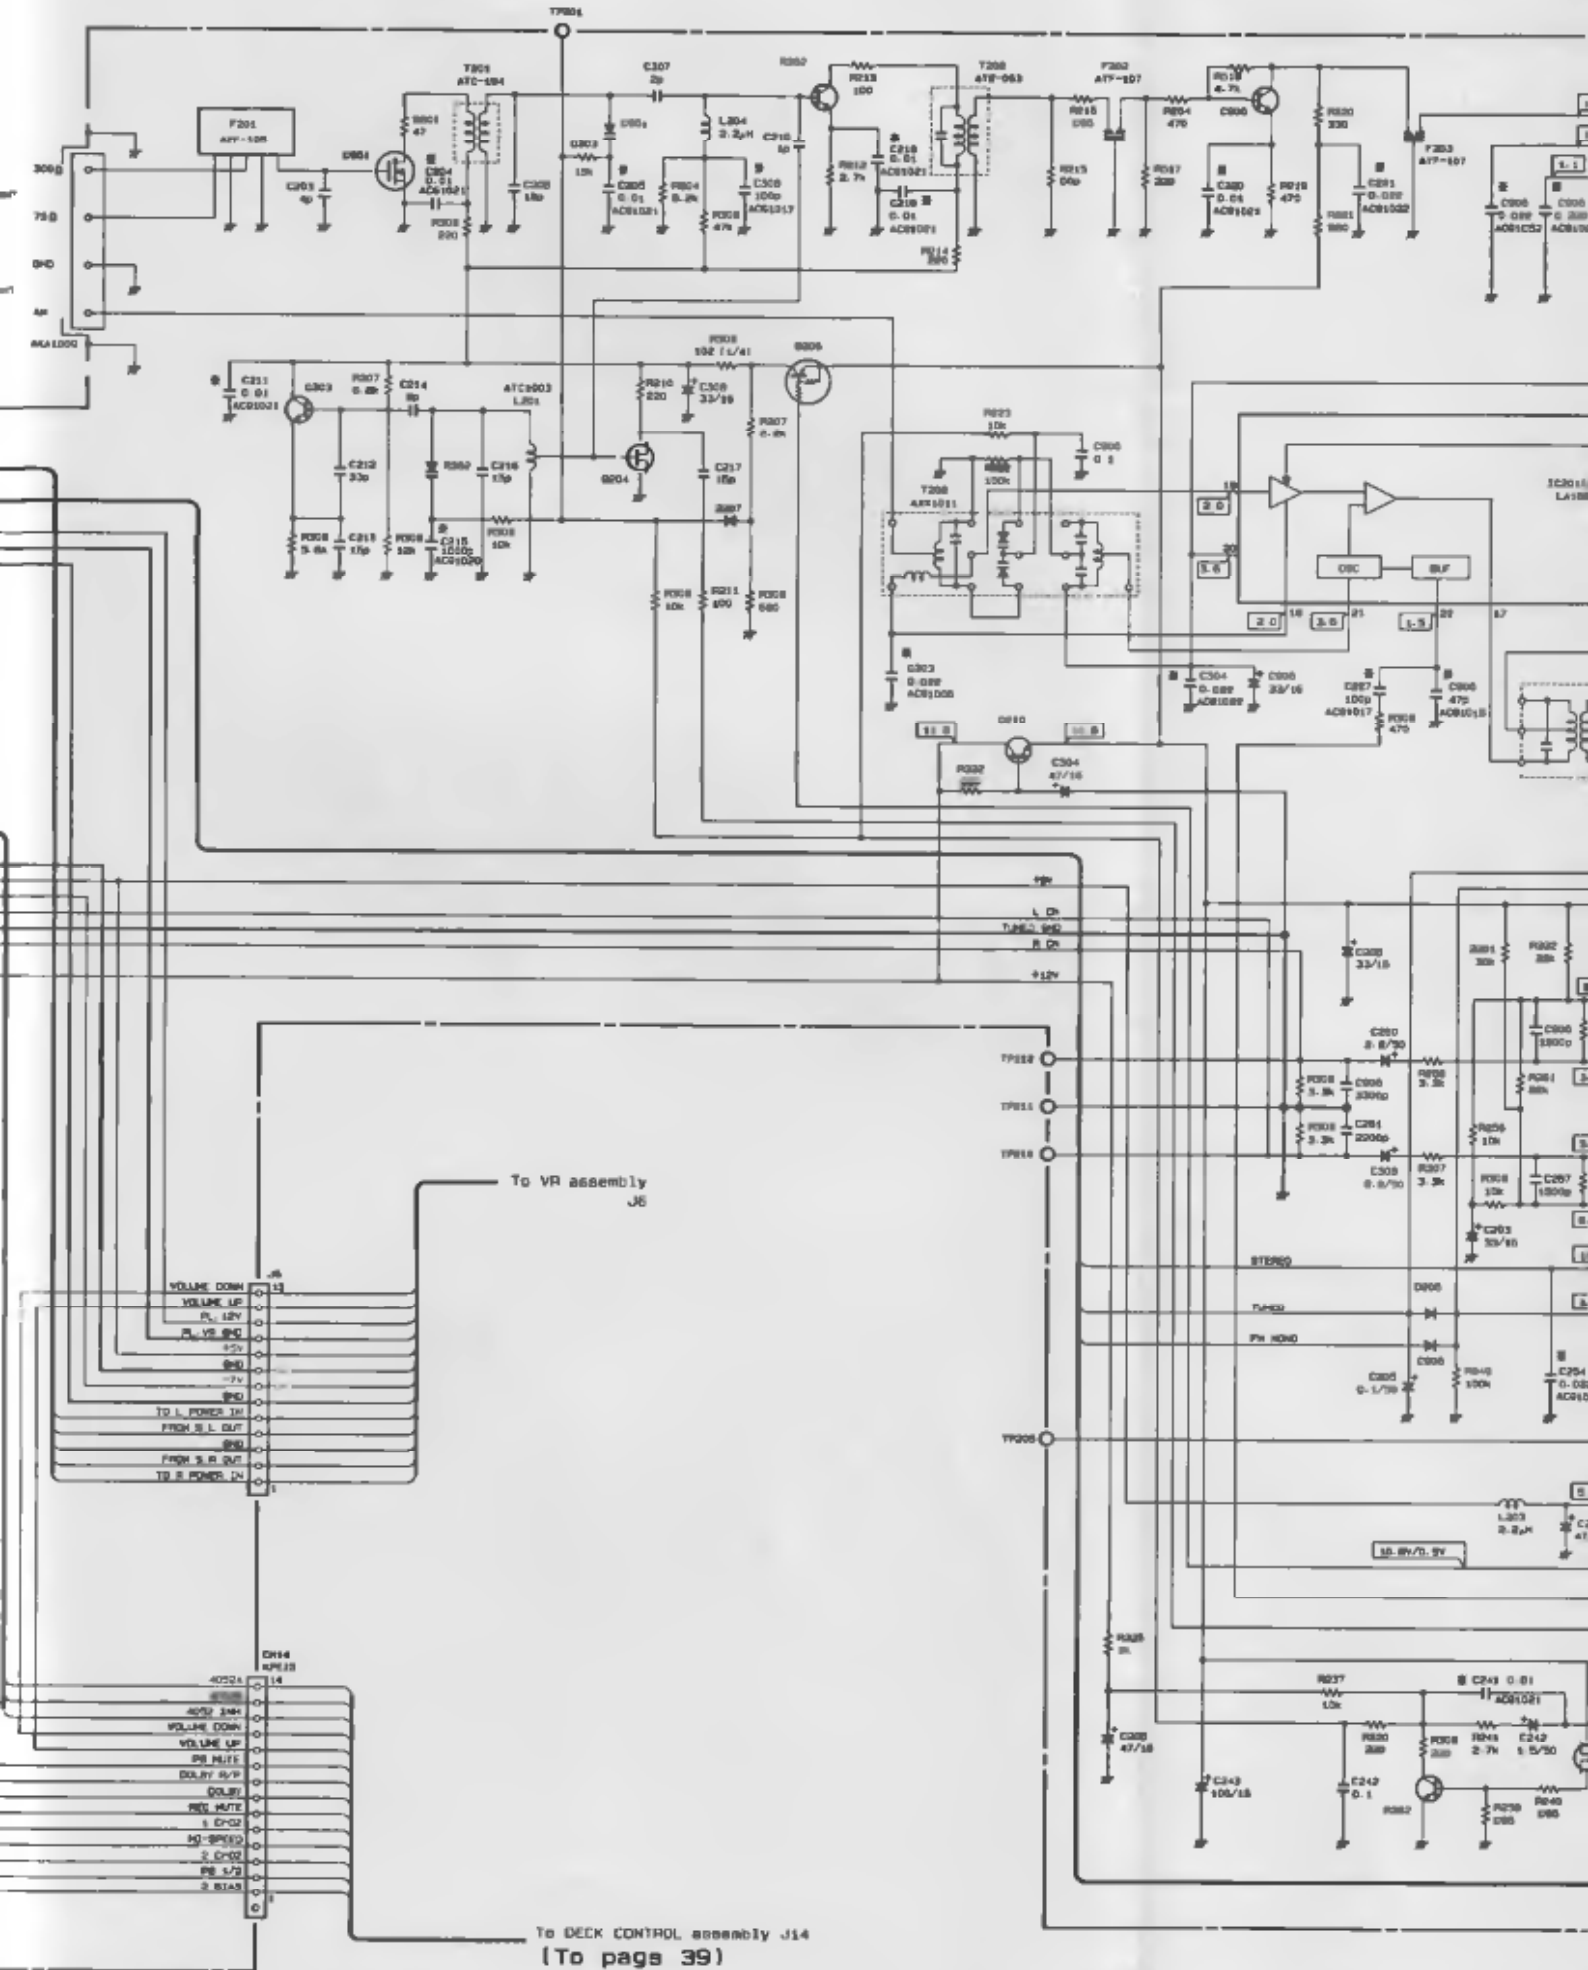


To DECK CONTROL assembly J14 (To page 39)

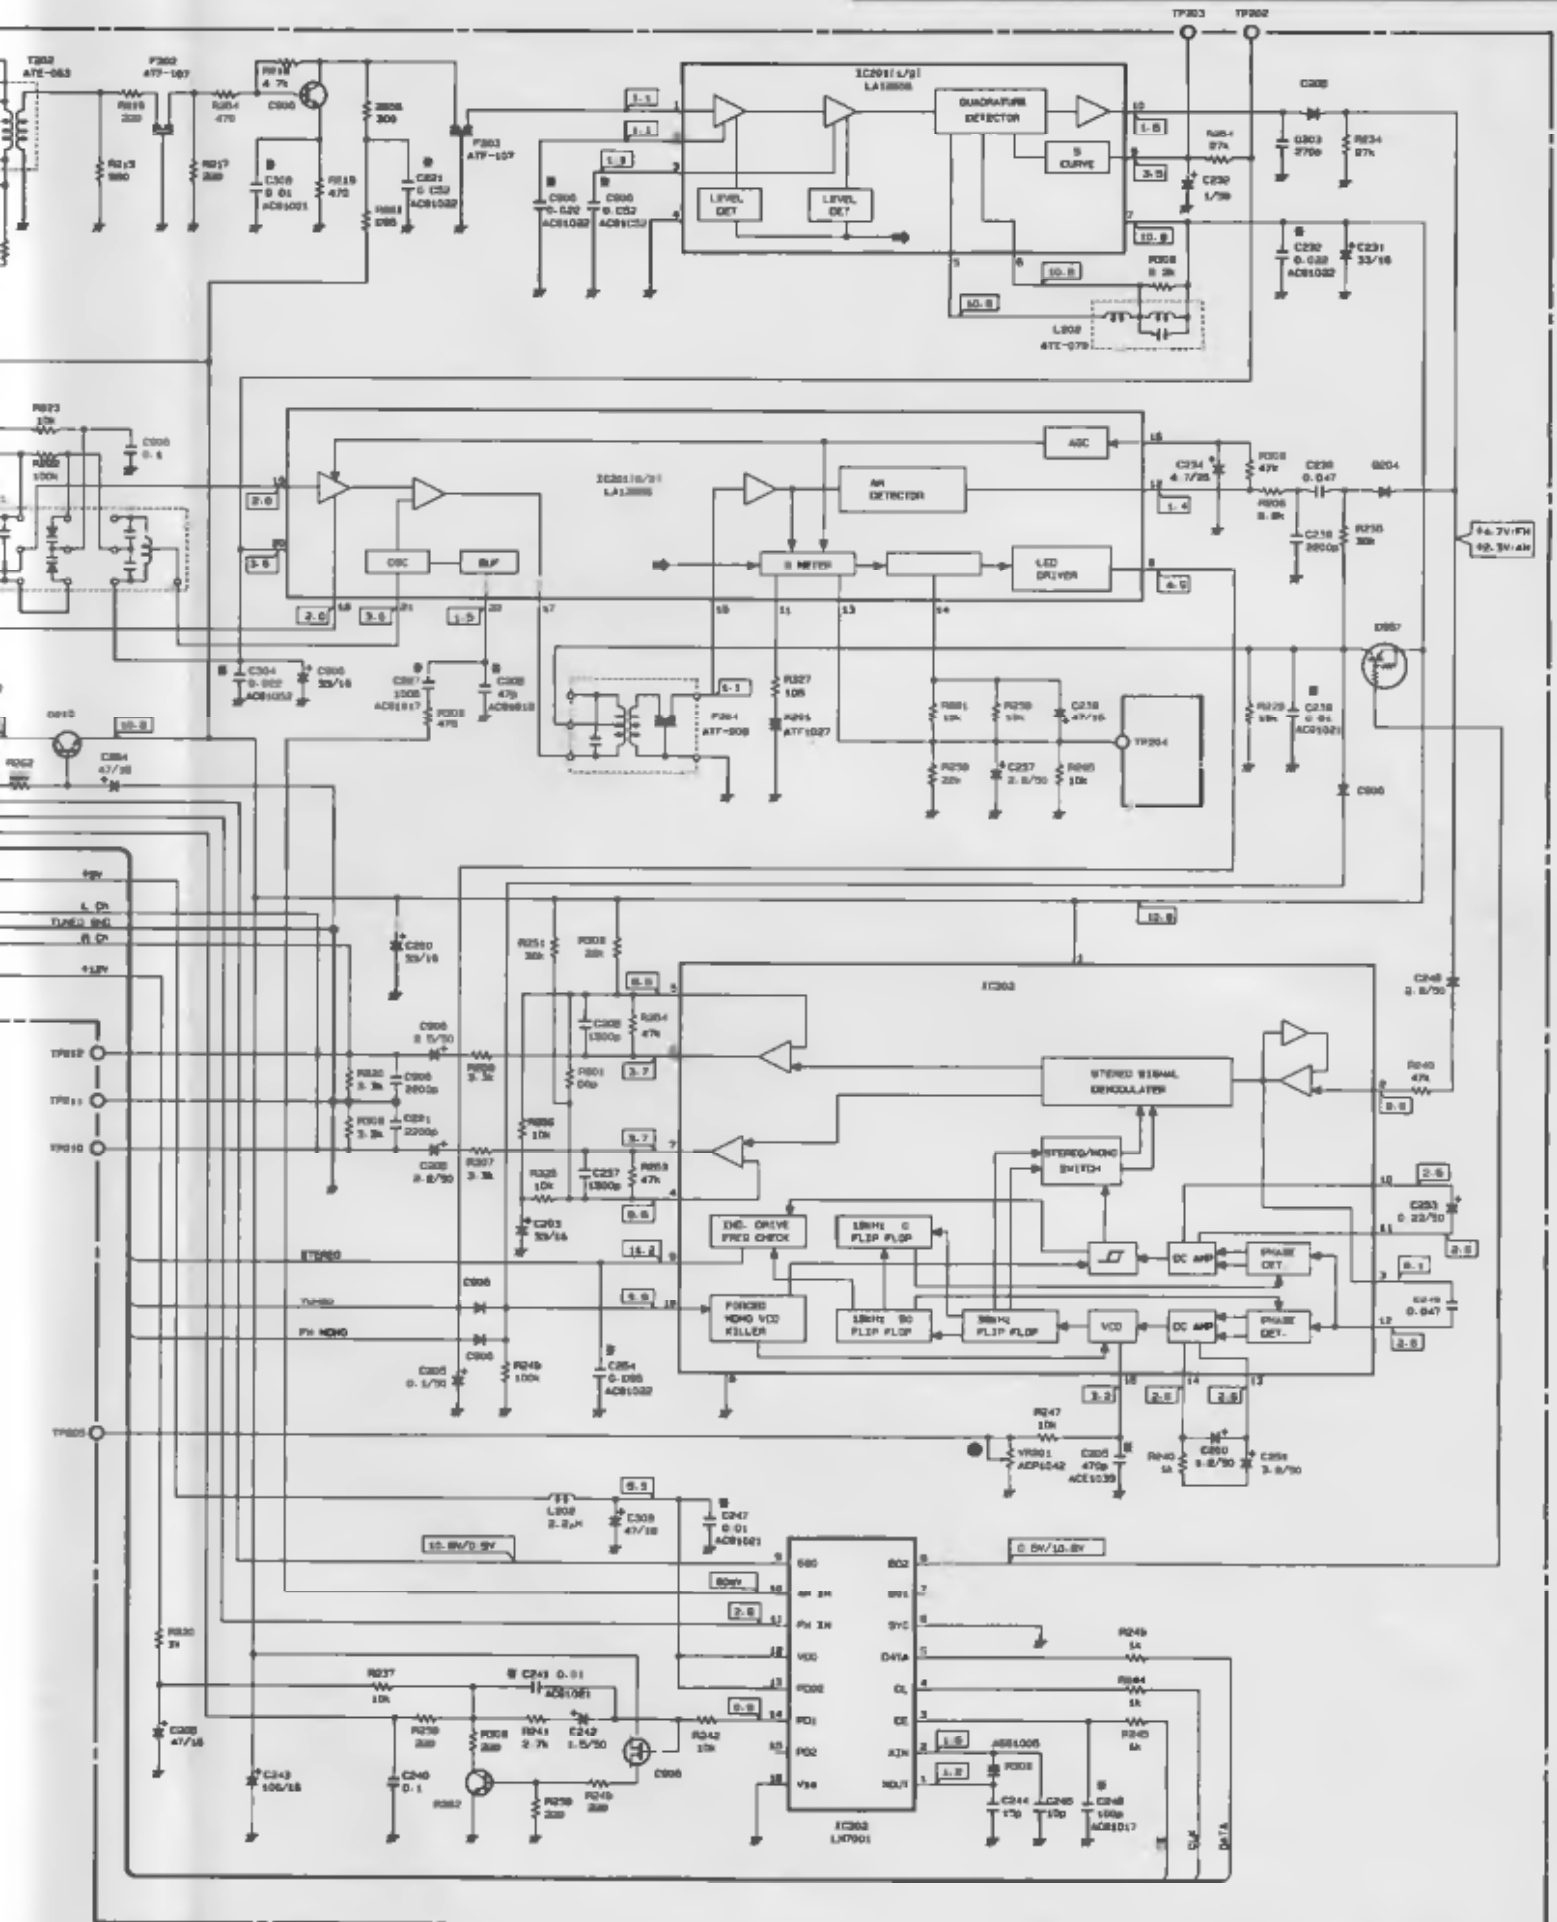

DECK CTRL assembly (AWZ2799)

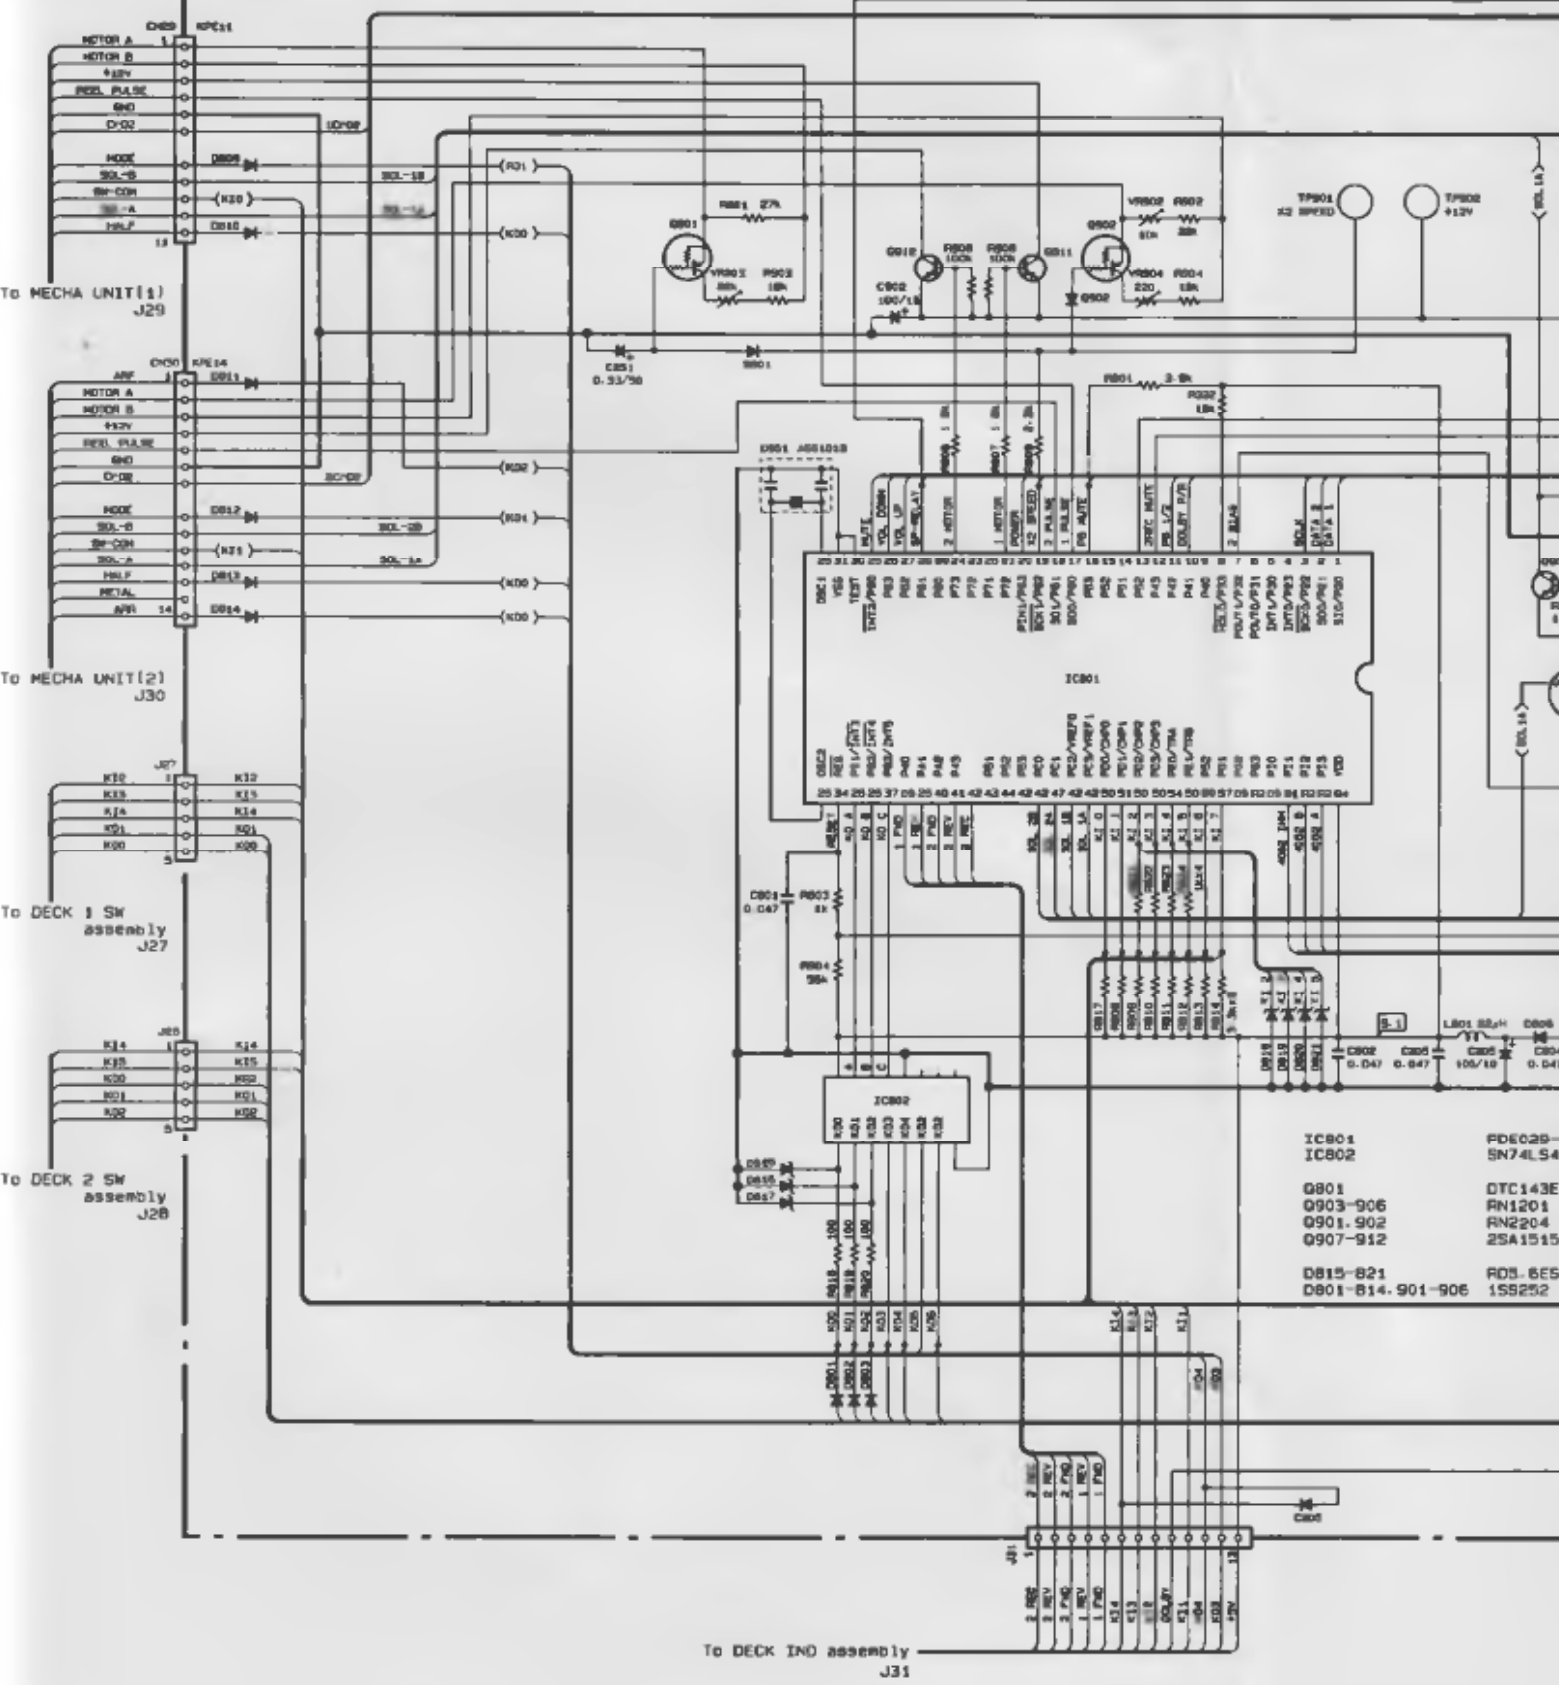

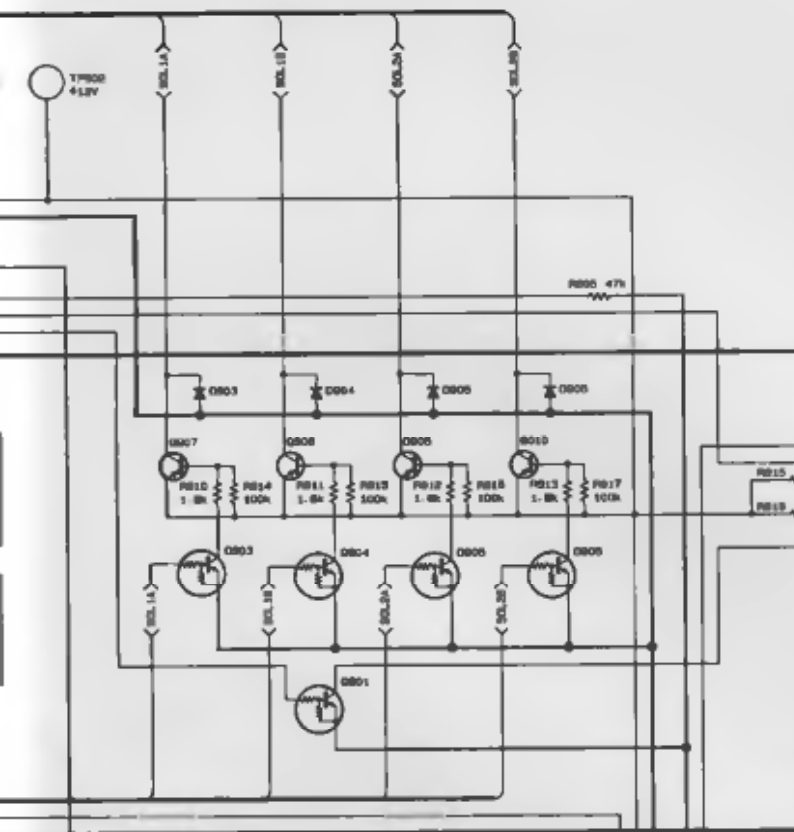

- Q803 2N3638
 - Q804 2N3638
 - Q805 2N3638
 - Q806 2N3638
 - Q807 2N3638
 - Q808 2N3638
 - Q809 2N3638
 - Q810 2N3638
 - Q801 2N3638
 - R803 1.0K
 - R804 100K
 - R811 1.0K
 - R813 100K
 - R817 1.0K
 - R818 100K
 - R813 1.0K
 - R817 100K
 - C803 100/50
 - C804 0.047
 - C805 0.047
- PDE029-C
 SN74LS42N
 DTC143ES
 RN1201
 RN2204
 2SA1515
 RDS-6ESB
 1552D2

To SUB TRANS assembly (53)
(To page 24)

To SIDE assembly
CN14
(To page 19)



 


To FRONT assembly
J21
(To page 23)

To SIDE assembly
CN1
(To page 18)

To FRONT assembly
J10
(To page 24)

POWER ass

To VR assembly
J24

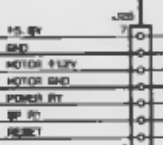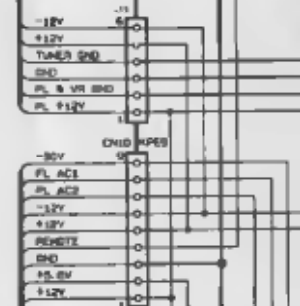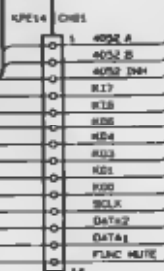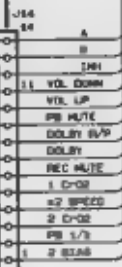

POWER assembly (AWZ2885)

assembly J24


ch F.B.
ch 2K
ch 10K
ch 100K
ch 1M

assembly CN1 (page 18)

30V
15V
12V
5V
1.5V


assembly J10 (page 24)

12V
5V
1.5V

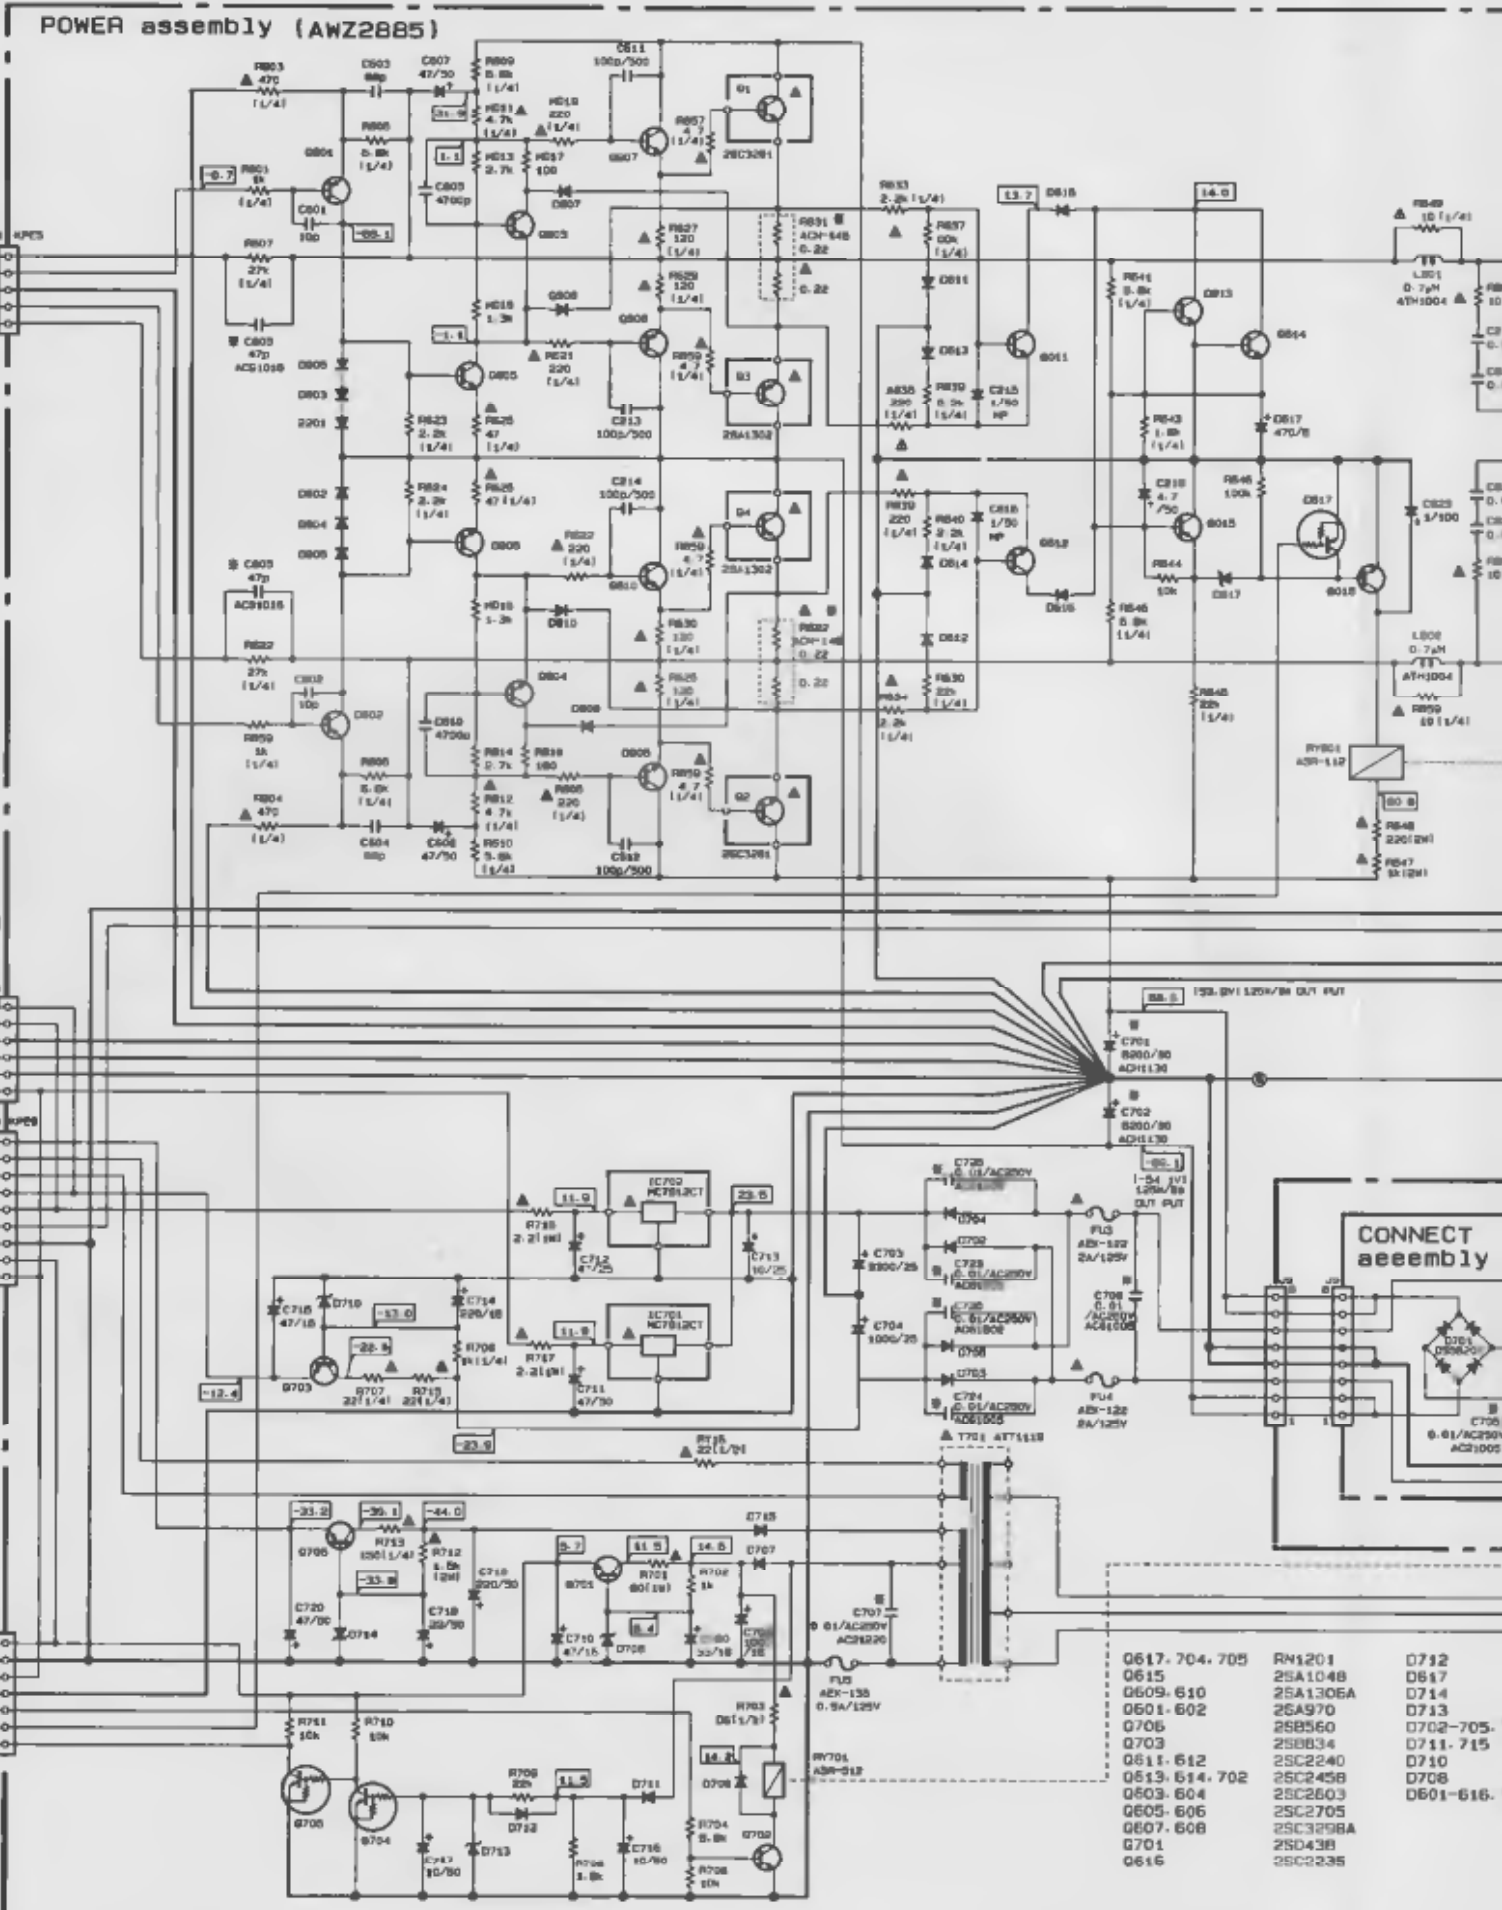

0617, 704, 705	RN1201	D712
0615	2SA1048	D617
0609, 610	2SA1306A	D714
0601, 602	2SA970	D713
0706	2SB860	D702-705
0703	2SB834	D711, 715
0611, 612	2SC2240	D710
0613, 614, 702	2SC245B	D708
0603, 604	2SC2603	D601-616
0605, 606	2SC2705	
0607, 608	2SC3298A	
0701	2SD43B	
0616	2SC2235	

CONNECT assembly

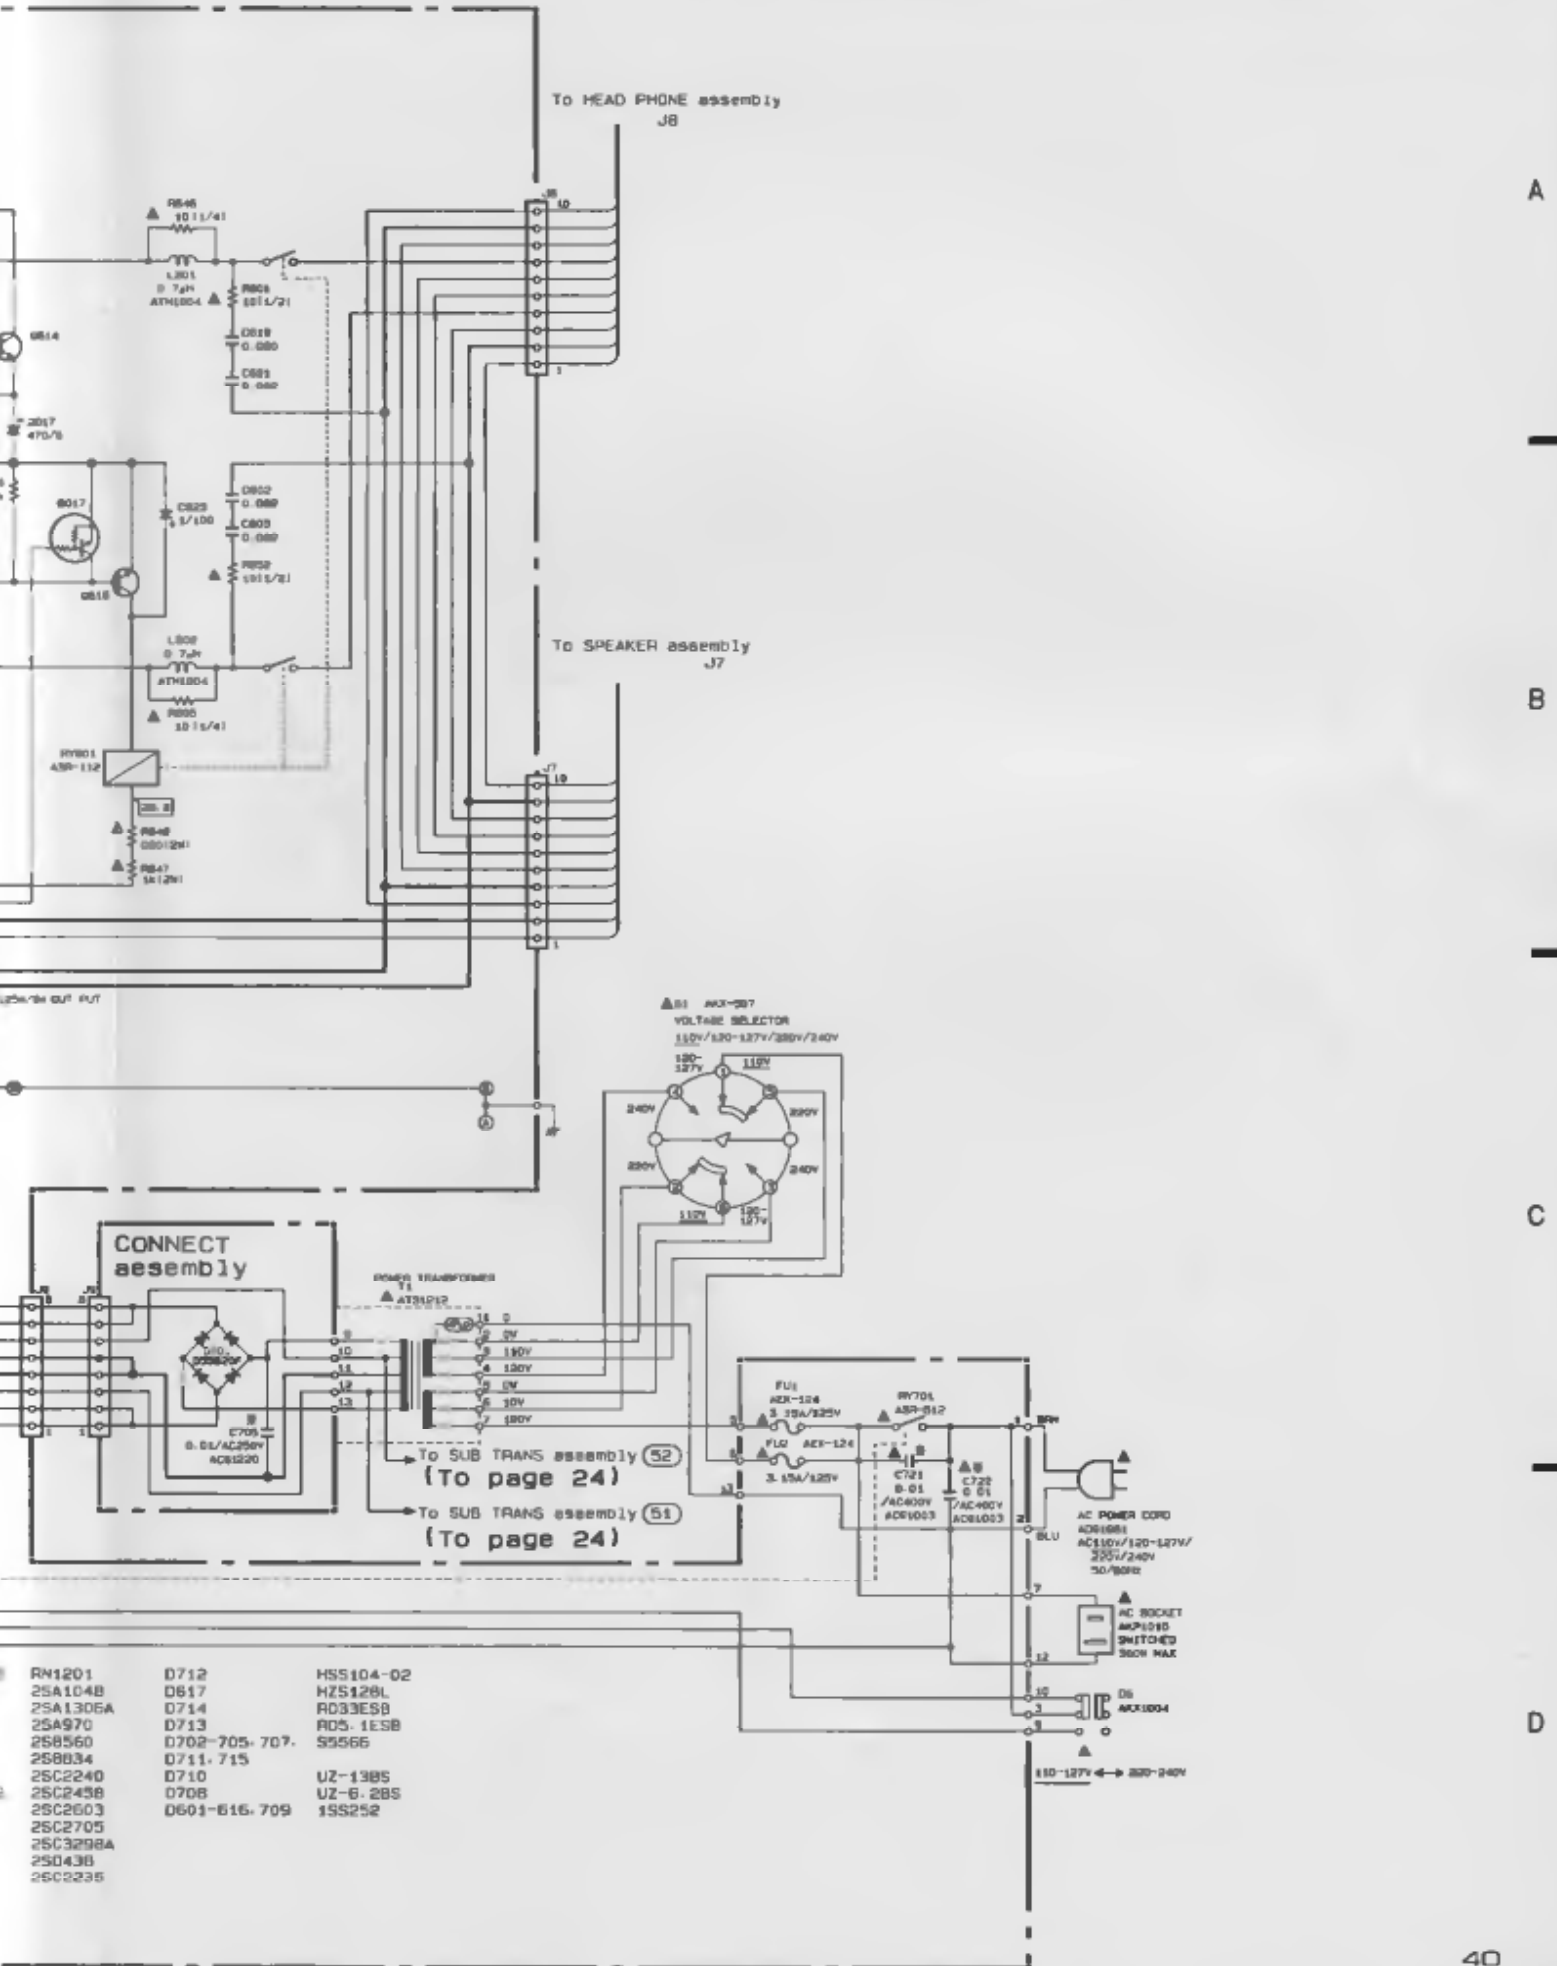

A

B

C

D

- | | | |
|----------|---------------|-----------|
| RN1201 | D712 | HSS104-02 |
| 25A104B | DB17 | HZS128L |
| 25A1306A | D714 | RD33ESB |
| 25A970 | D713 | RD5-1ESB |
| 25B560 | D702-705-707 | S9566 |
| 25B834 | D711, 715 | |
| 25C2240 | D710 | UZ-1385 |
| 25C2458 | D708 | UZ-6-285 |
| 25C2603 | D601-616, 709 | 15S252 |
| 25C2705 | | |
| 25C3298A | | |
| 25D438 | | |
| 25C2235 | | |